


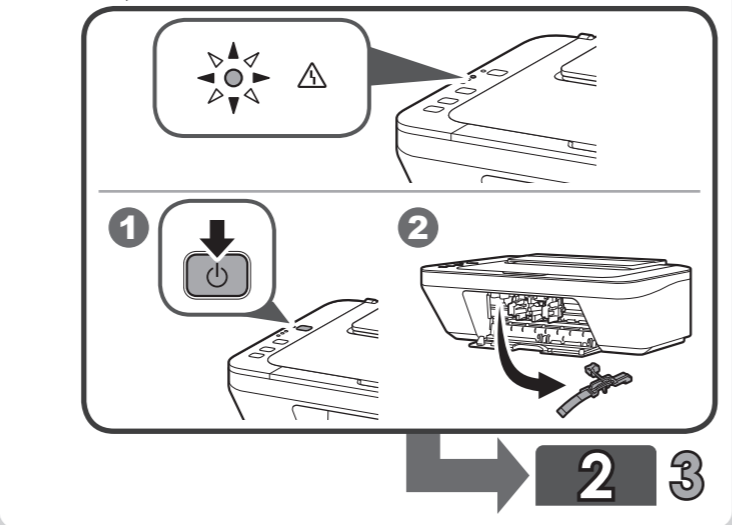
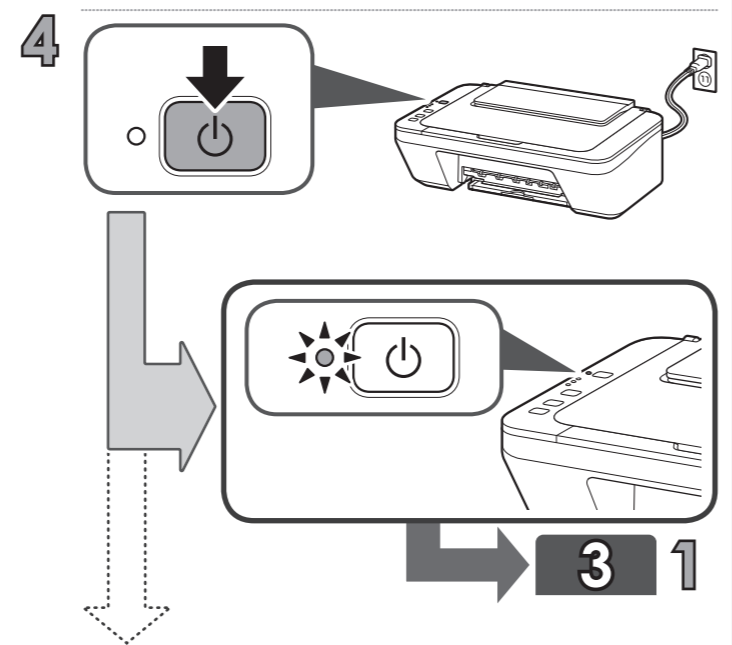
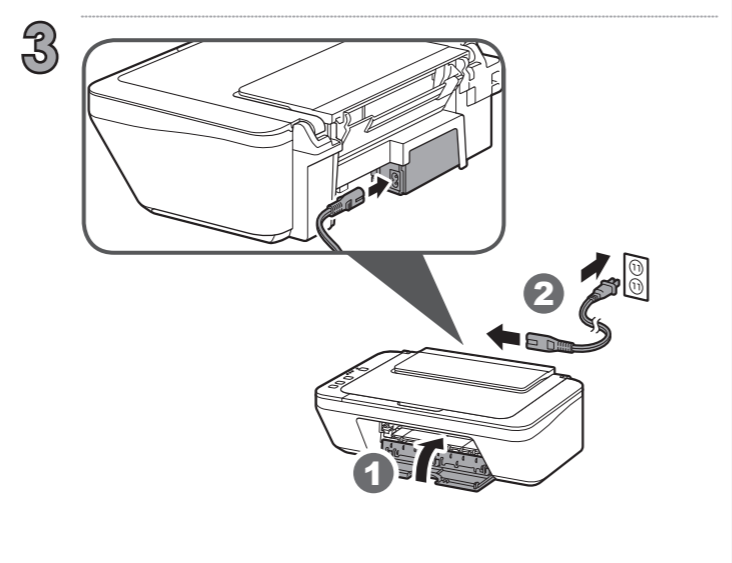
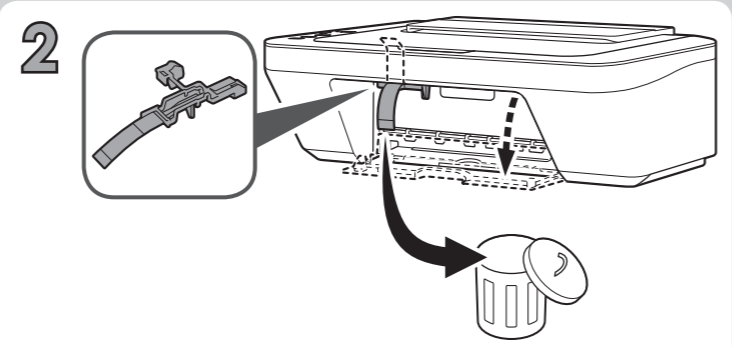
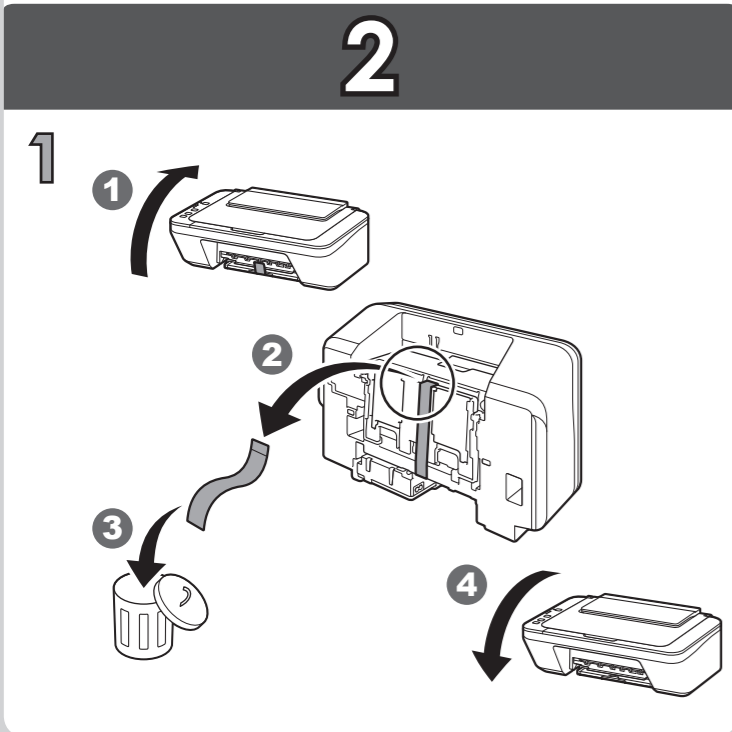
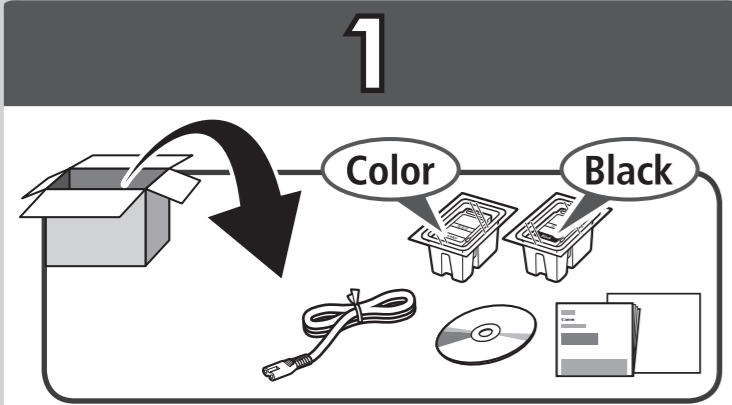
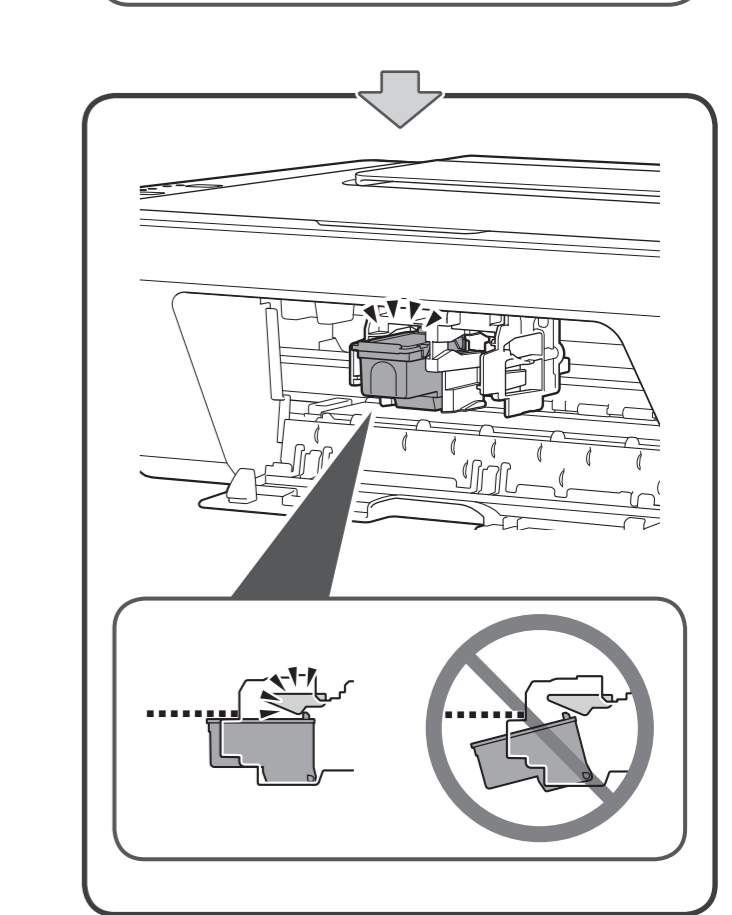
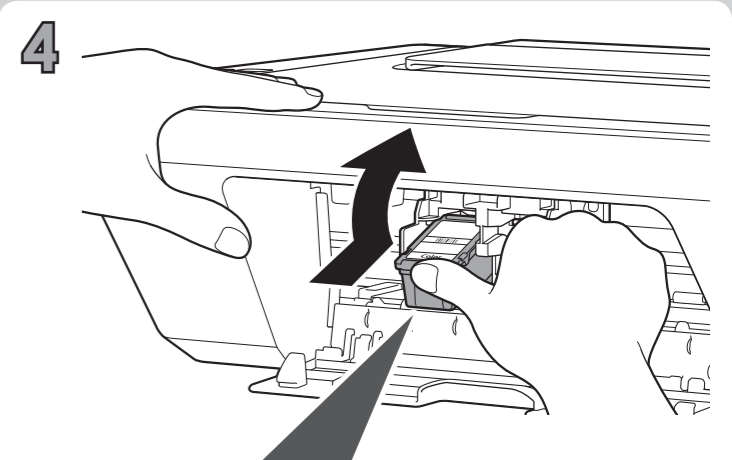
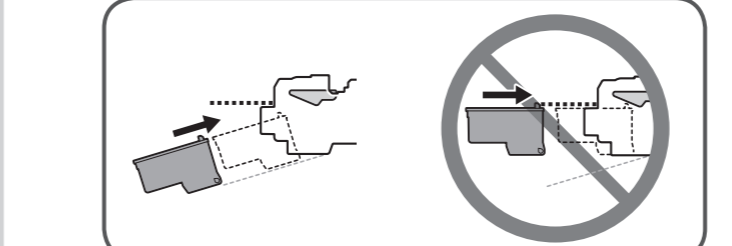


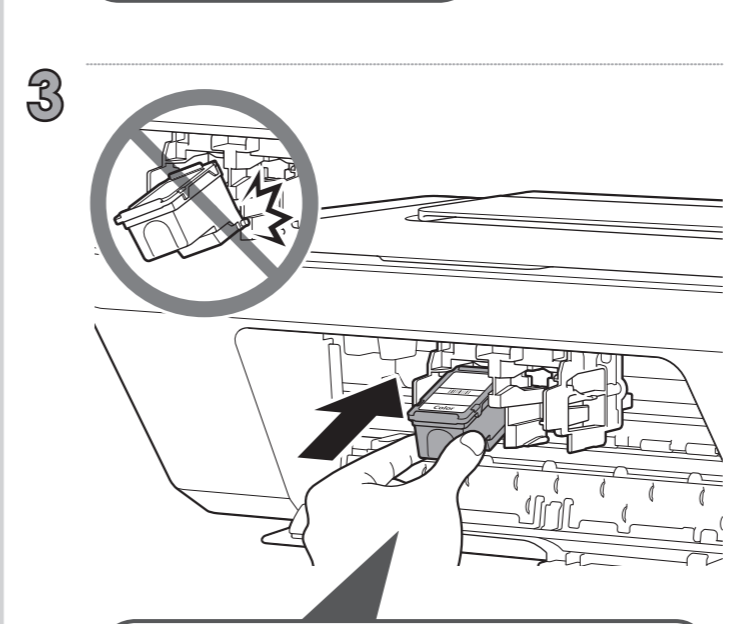


Canon PIXMA MG2500 series
PIXMA MG2400 series

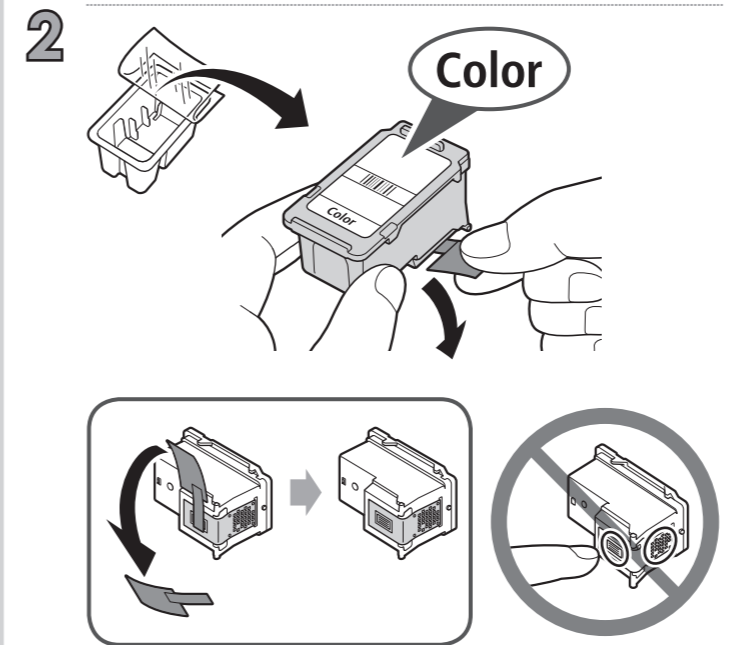


3

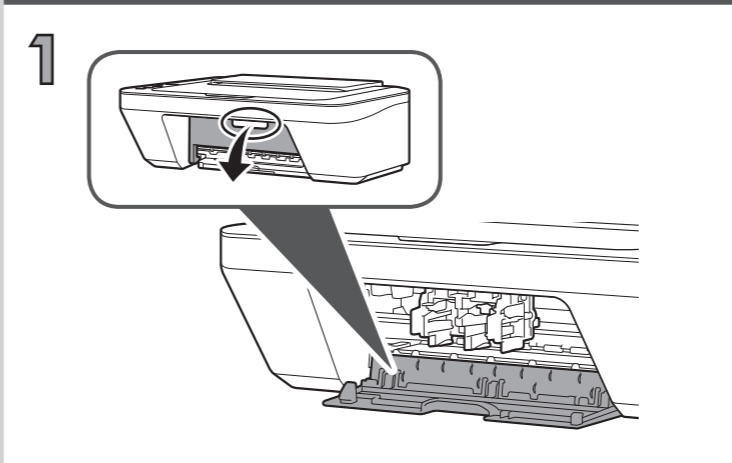

5

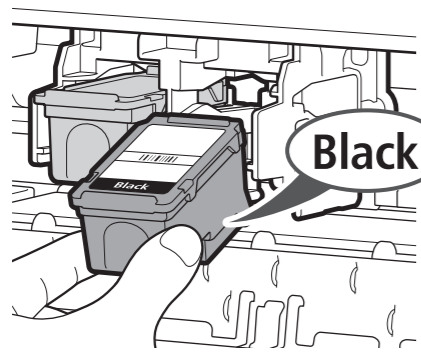





Black

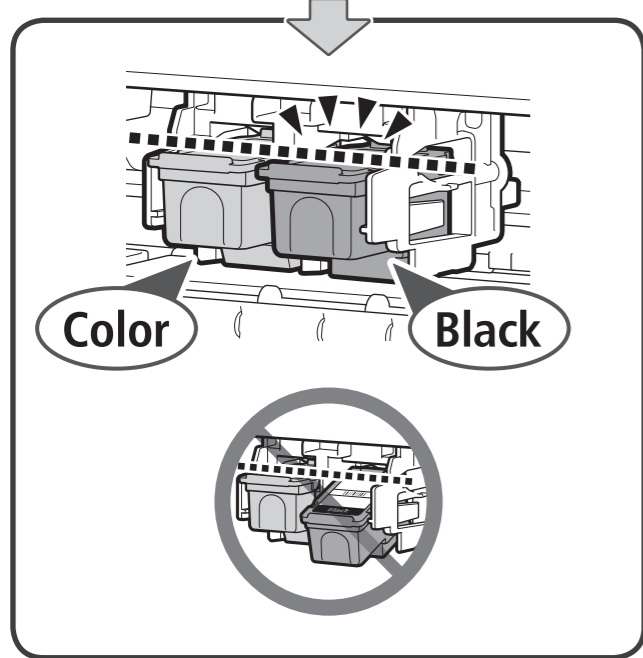

Color

Black

 6

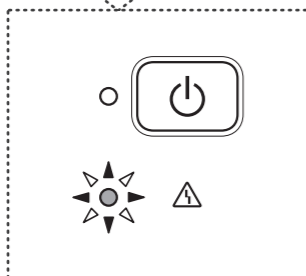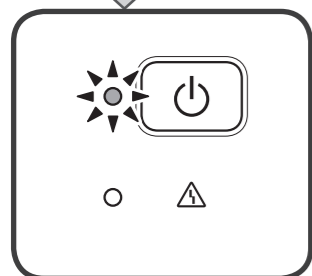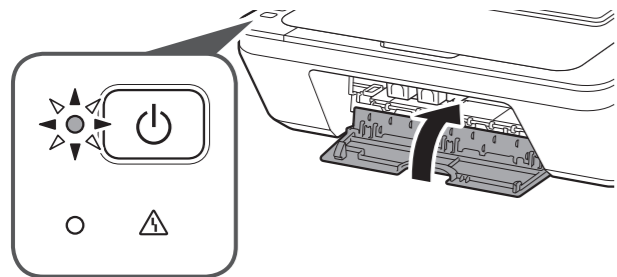

4


1

3


3

4


1

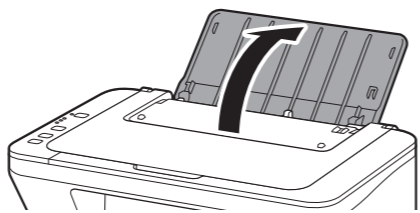


2

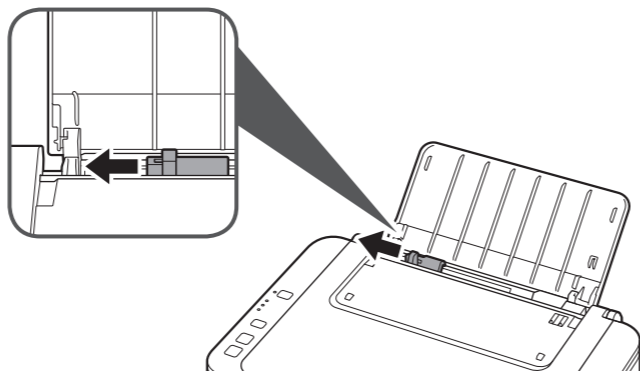


3

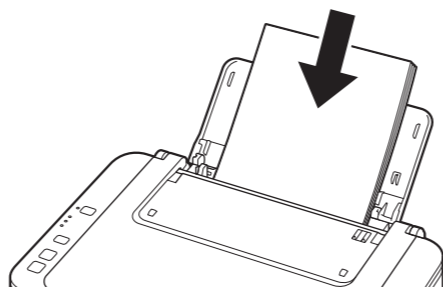

4

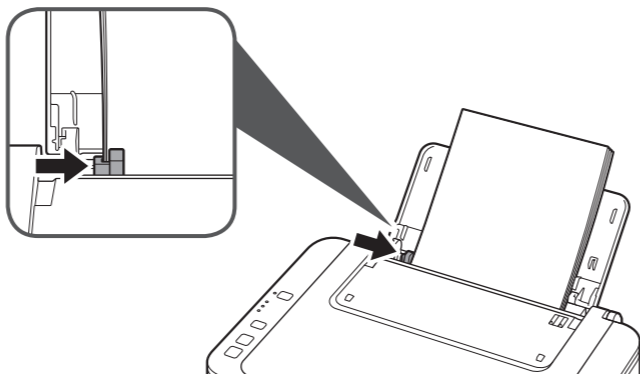

5

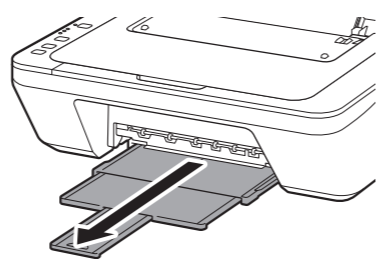

5



canon.com/ijsetup


Windows PC



Quick Menu



http://

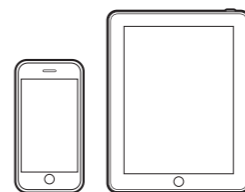

canon.com/ijsetup



http://

