



ELITE
GRADE.

CONGRATULATIONS!

You are now the proud owner of a Kone Pure SE! The Kone Pure SE was designed for gamers who want the fan-favorite design of the Kone in a slimmer package. At 88 grams and 91% the size of its bigger brother, it packs one hell of a punch. Featuring a Pro-Grip surface for maximum mouse control, its elite-grade ergonomics make it a top choice for gamers who take their peripherals seriously. Despite its reduced size, it boasts industry-leading optics with its 5000dpi Pro-Optic (R7) sensor.

The Kone Pure SE is elite grade.

5000 DPI PRO-OPTIC (R7) SENSOR

The Pro-Optic (R7) sensor is adjustable in increments up to an ultra-precise 5000dpi. Its lag-free optics suit low- and high-sensitivity gamers alike, making it perfectly suited to fast, point-and-click style aiming as well as tracking.

ROCCAT® SWARM

Swarm is the software incarnation of ROCCAT's future ready philosophy. It'll cover you for all relevant gaming platforms and devices. It's the next-gen system that keeps on top all games, apps and ROCCAT® products in one place.

RGB ILLUMINATION

Featuring an illuminated ROCCAT® logo in vivid color that lets you design a theme that's totally unique to you. The customizable lighting system is configurable in multiple rich colors.

SPECIFICATIONS

PACKAGE CONTAINS

- ROCCAT® Kone Pure SE – Core Performance RGB Gaming Mouse
- Quick-Installation Guide
- Disposal Information

SYSTEM REQUIREMENTS

- Windows® 7, Windows® 8, Windows® 10
- USB 2.0 port
- Internet connection (for driver installation)

TECH SPECS

- Pro-Optic (R7) optical sensor with 5000dpi
- OMRON Switches
- 1000Hz polling rate
- 1ms response time

- 20G acceleration
- 100ips motion detection speed
- ARM Cortex-M0 50MHz
- 1.8m PVC USB cable
- Weight 88g



QUICK-INSTALLATION GUIDE IMPORTANT DOCUMENT

ROCCAT GmbH
Paul-Dessau-Str. 3G, 22761 Hamburg, Germany

© 2017 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher.

BSM 限用物質聲明表查詢, 請上 <http://bsmi.roccat.org/176/>
MSI-PREM-HOG-KONEPURE-SE
T32293 R4HS

Should you need assistance ...

Our support team is ready to help with any technical questions.
Just send an e-mail to support@roccat.org. Or visit our website at: www.roccat.org/support

PLEASE USE YOUR PRODUCT'S SERIAL NUMBER
(LOCATED ON THE BOTTOM LABEL) FOR
REGISTRATION. SIGN IN AT:
www.roccat.org/support/authenticity-check



DEFAULT
BUTTON ASSIGNMENT
[no driver installed]

STANDARD

- 1

= Click
- 2

= Menu
- 3

= Universal scrolling
- 4

= IE Forward
- 5


= IE Backward
- 6

= Scroll up
- 7

= Scroll down
- 8

= DPI up
- 9

= DPI down

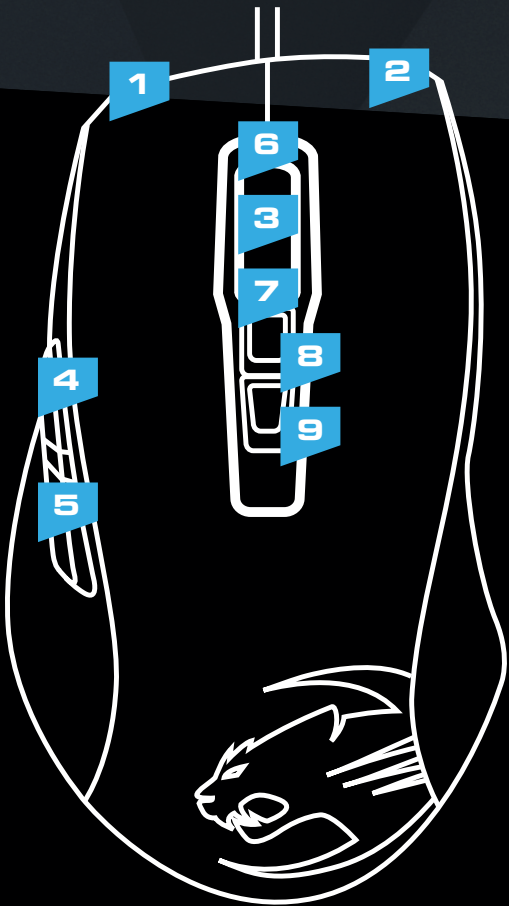

WHAT'S
ROCCAT® SWARM?

Swarm provides next-level ROCCAT® product integration. It works a unified driver suite where you can keep tabs on all of your ROCCAT® devices in one place. Say goodbye to multiple tray icons – with Swarm you have a veritable gaming command HQ for every weapon in your arsenal.



FAN-FAVORITE
KONE SHAPE

The Kone Pure SE represents the little brother in the Kone series. It retains the fan-favorite Kone shape but is only 91% the size of its sibling. It features the same winning formula of comfortable, streamlined ergonomics coupled with precision optics. The Kone Pure SE is slimmed down into a slightly smaller package and weighs a remarkably light 88 grams in weight.



DE

ANLEITUNG

1.

Verbinde deine ROCCAT® Kone Pure SE mit einem freien USB Steckplatz deines Computers.

2.

Starte deinen Computer neu und stelle eine Verbindung zum Internet her.

3.

Rufe www.roccat.org/roccat-swarm auf und lade dir die neuste Swarm Version herunter.

4.

Starte die Software Installation und folge den Anweisungen.

DK

INSTRUKTIONER

1.

Sæt USB-forbindelsen på din ROCCAT® Kone Pure SE ind i en ledig USB port.

2.

Start computeren op, og forbind den med internettet.

3.

Navigér til www.roccat.org/roccat-swarm, og download den nyeste version af Swarm.

4.

Start software-installationen, og følg anvisningerne på skærmen.

EN

INSTRUCTIONS

1.

Plug the USB connector on your ROCCAT® Kone Pure SE into any free USB port.

2.

Boot your computer and connect to the internet.

3.

Navigate to www.roccat.org/roccat-swarm and download the latest version of Swarm.

4.

Start the software installation process and follow the on-screen instructions.

ES

INSTRUCCIONES

1.

Enchufe el conector USB en un puerto USB libre del ROCCAT® Kone Pure SE.

2.

Reinicie el ordenador y conéctese a internet.

3.

Acceda a la página www.roccat.org/roccat-swarm y descárguese la última versión swarm.

4.

Inicie el proceso de instalación de software y siga las instrucciones de la pantalla.

FI

OHJEET

1.

Pistä USB-liitin sisään ROCCAT® Kone Pure SE -laitteessasi mihin tahansa vapaaseen USB-porttiin.

2.

Käynnistä tietokoneesi ja yhdistä internetiin.

3.

Siirry osoitteeseen www.roccat.org/roccat-swarm ja lataa Swarm-ohjelmiston uusin versio.

4.

Käynnistä ohjelmiston asennusprosessi ja seuraa näyttöruudulla näkyviä ohjeita.

FR

INSTRUCTIONS

1.

Insérez le connecteur USB de votre ROCCAT® Kone Pure SE à un port USB libre.

2.

Allumez votre PC et connectez-vous à internet.

3.

Allez sur www.roccat.org/roccat-swarm et téléchargez la dernière version de Swarm.

4.

Débutez l'installation du programme et suivez les indications.

PL

INSTRUKCJA

1.

Podłącz wtyk USB ROCCAT® Kone Pure SE do wolnego portu USB.

2.

Uruchom komputer i połącz się z Internetem.

3.

Przejdź do strony www.roccat.org/roccat-swarm i pobierz najnowszą wersję Swarm.

4.

Rozpocznij instalację oprogramowania i postępuj zgodnie z instrukcjami na ekranie.

PT

INSTRUÇÕES

1.

Ligar o conector USB ao seu ROCCAT® Kone Pure SE numa porta USB livre.

2.

Ligar o computador e estabelecer ligação à internet.

3.

Navegar para www.roccat.org/roccat-swarm e descarregar a versão mais recente do Swarm.

4.

Iniciar o processo de instalação do software e seguir as instruções indicadas no ecrã.

RU

ИНСТРУКЦИИ

1.

Вставьте USB-коннектор ROCCAT® Kone Pure SE в любой свободный USB-порт.

2.

Включите компьютер и выйдите в Интернет.

3.

Зайдите на www.roccat.org/roccat-swarm и загрузите самую новую версию Swarm.

4.

Начните процесс установки программного обеспечения и следуйте указаниям на экране.

SE

INSTRUKTIONER

1.

Sätt ROCCAT® Kone Pure SE USB-kontakt i en ledig USB-port.

2.

Boota datorn och koppla upp dig på Internet.

3.

Gå till www.roccat.org/roccat-swarm och ladda ned den senaste versionen av Swarm.

4.

Starta programvaruinstallationen och följ anvisningarna på bildskärmen.