



*Availability of Netflix and YouTube features is dependent on the TV model.

1. STANDBY: Turn the TV On/Off
2. SOURCE: Select the signal source
3. CANCEL (within TXT): Cancel the TXT on screen AUDIO: Select TV audio mode between stereo/mono (While playing DVD/multimedia): Switch audio channel.
4. MIX (Within TXT): Set transparency FAV LIST: Favourite channel list.
5. TXT: Enter or exit teletext.
6. SIZE(within TXT): Sets size of the characters. SUBTITLE (DTV mode): Select subtitle mode.
7. ►► (MEDIA mode): Next file or chapter. SUBPAGE(within txt): View Subpage
8. ◀◀ (MEDIA mode): Fast rewind INDEX: Display the index page.
9. ◀◀ (MEDIA mode): Previous file or chapter. REVEAL: Reveal hidden information
10. ►► (MEDIA mode): Fast forward. HOLD: Hold the current page.
11. NETFLIX*: Open NETFLIX*.
12. ►|| (MEDIA mode): Press to pause / play. TIMESHIFT (Within DVR): Timeshift
13. ■ (MEDIA mode): Press to stop playback. EPG: Enter or exit the electronic program guide.
14. YOUTUBE: Open YOUTUBE*.
15. RECORD: DTV mode record to USB stick.
16. BROWSER: Launch internet browser.
17. MIC: Press and hold to record voice command, which is sent to the TV when button released.
18. MENU: Enter the Main Menu
19. MEDIA: Enter Media playback mode
20. DIRECTION BUTTONS: used for menu navigation.
21. ENTER: Confirm or Enter.
22. SMART: Enter SMART mode.
23. POINTER: Turn the pointer On/Off.
24. EXIT: Exit the current Menu.
25. MUTE: Mute the sound.
26. VOL +: Increase the volume VOL -: Decrease the volume
27. CH+: Next Channel CH-: Previous Channel
28. TV/RAD: Change between TV and Radio Modes
29. ASPECT: Press repeatedly to select the desired screen size.
30. HDMI: Set HDMI options
31. PICTURE: Set picture options
32. SOUND: Set sound options
33. 0-9: Press the buttons to select a channel
34. DISPLAY: Display the information for the current video / audio.
35. RECALL: Return to previous channel.
36. RED: Access the red item or page. GREEN: Access the green item or page. YELLOW: Access the yellow item or page. BLUE: Access the blue item or page.

CHANGING MODE

DEFAULT TV MODE (Returns the remote to factory settings): Press and hold OK and SMART for 3 seconds

LEARNING MODE (Used for programming individual buttons): Press and hold OK and EXIT for 3 seconds

Unused buttons on your electriQ remote can also be reprogrammed to control other devices

HOW TO PROGRAM BUTTONS

1. Press and hold OK and 3 for 3 seconds. The LED will be illuminated.
2. Press the button on the electriQ remote to program. The LED will flash slowly.
3. With the other remote pointing at the end of the electriQ remote, press the button required on the other remote. The LED will flash quickly.
4. Repeat steps 2 and 3 for other buttons.
5. Hold OK for 3 seconds to save the changes.