

electric

55/65 inch UHD LED TV



EIQ-55UHDT2 / EIQ-65UHDT2

LED TV



CONTENTS

Safety Information.....	2
What's included.....	4
TV Stand Installation/Removal.....	5
Getting Started.....	6
Connecting to External Devices.....	8
Remote Control.....	9
Settings.....	11
Specifications.....	23
Support & Disposal.....	24

SAFETY INFORMATION

- Read these instructions – All the safety and operating instructions should be read before this product is operated.
- Keep these instructions – The safety and operating instructions should be retained for future reference.
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions – All operating and usage instructions should be followed.
- Do not use this equipment near water – The appliance should not be used near water or moisture e.g. in a wet basement or near a swimming pool.
- Clean only with a dry cloth. Do not use solvents or petroleum based fluids.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, stoves or other apparatus (including amplifiers) that produce heat.
- Do not tamper with the supplied plug. This plug is a BS1363 standard plug.
- Protect the power cord from being walked on or pinched, particularly at the plug and at the point where they exit from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart or stand is used, use caution when moving it to avoid any injuries or damage from it tipping over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus or it has been exposed to rain or moisture, it does not operate normally or has been dropped.
- Please keep the unit in a well-ventilated environment.
- The TV set should only be connected to a mains power supply as rated on the back of the equipment.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on the cable as this may cause damage.
- Hold the main plug, not the wires, when removing from a socket.

- Pull the plug out immediately and seek professional help if the main plug or cable is damaged, liquid has spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Only qualified personnel should service this apparatus.
- To avoid battery leakage, remove exhausted batteries from the remote control when not in use for a long period.
- Do not block ventilation slots on the back cover. The TV can be placed in a cabinet but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, this may damage internal components.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **WARNING:** The wall plug socket is used as a disconnection device and should remain readily accessible.
- **WARNING:** The batteries shall not be exposed to excessive heat such as direct sunlight or fire.

 <p>This warning sign is to warn of dangerous voltage inside the product.</p>	<div style="border: 1px solid black; padding: 2px; text-align: center; margin-bottom: 5px;"> CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN </div> <p>CAUTION: To reduce the risk of electric shock, DO NOT remove the cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>This warning sign is to alert you of important instructions accompanying the product.</p>
--	---	--



This equipment is a Class II or double insulated electrical appliance. It does not require a grounded connection.



AT FULL VOLUME, PROLONGED LISTENING MAY DAMAGE THE USER'S HEARING.

 
WHAT'S INCLUDED




TV Set



Remote Control (2xAAA batteries)

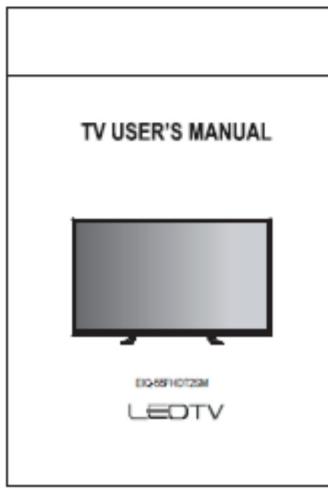

User's Manual

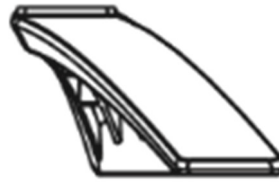 


Base Stand



6 Screws

 TV STAND INSTALLATION/REMOVAL

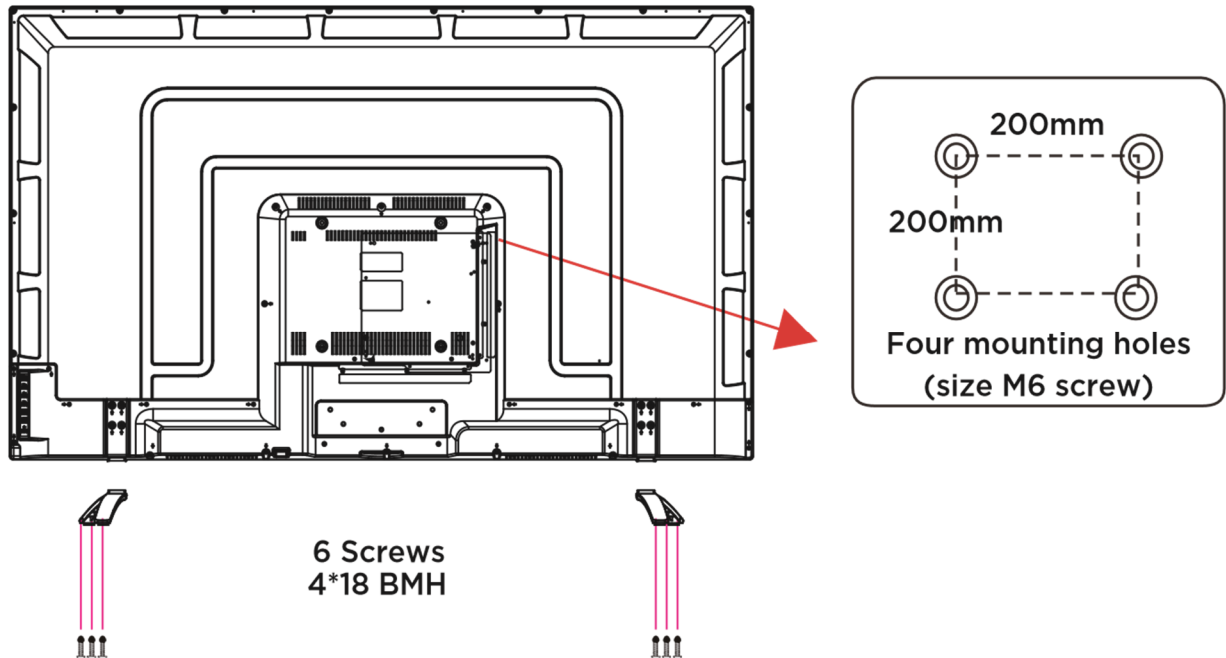


WALL MOUNTING

- The TV is provided with mounting holes for a VESA approved wall mounting bracket (not supplied)
- The VESA mounting pattern is:
 - 55" 200x200mm and the size of the screws is 4 x M6 x 10 (not supplied)
 - 65" 400x400mm and the size of the screws is 4 x M6 x 20 (not supplied)
- Do not use screws longer than specified or damage will occur to the internal components.

NOTE: As the TV set is considered heavy, please consult with a professional wall mount installer to perform the installation.


GETTING STARTED

 BUTTON FUNCTIONS

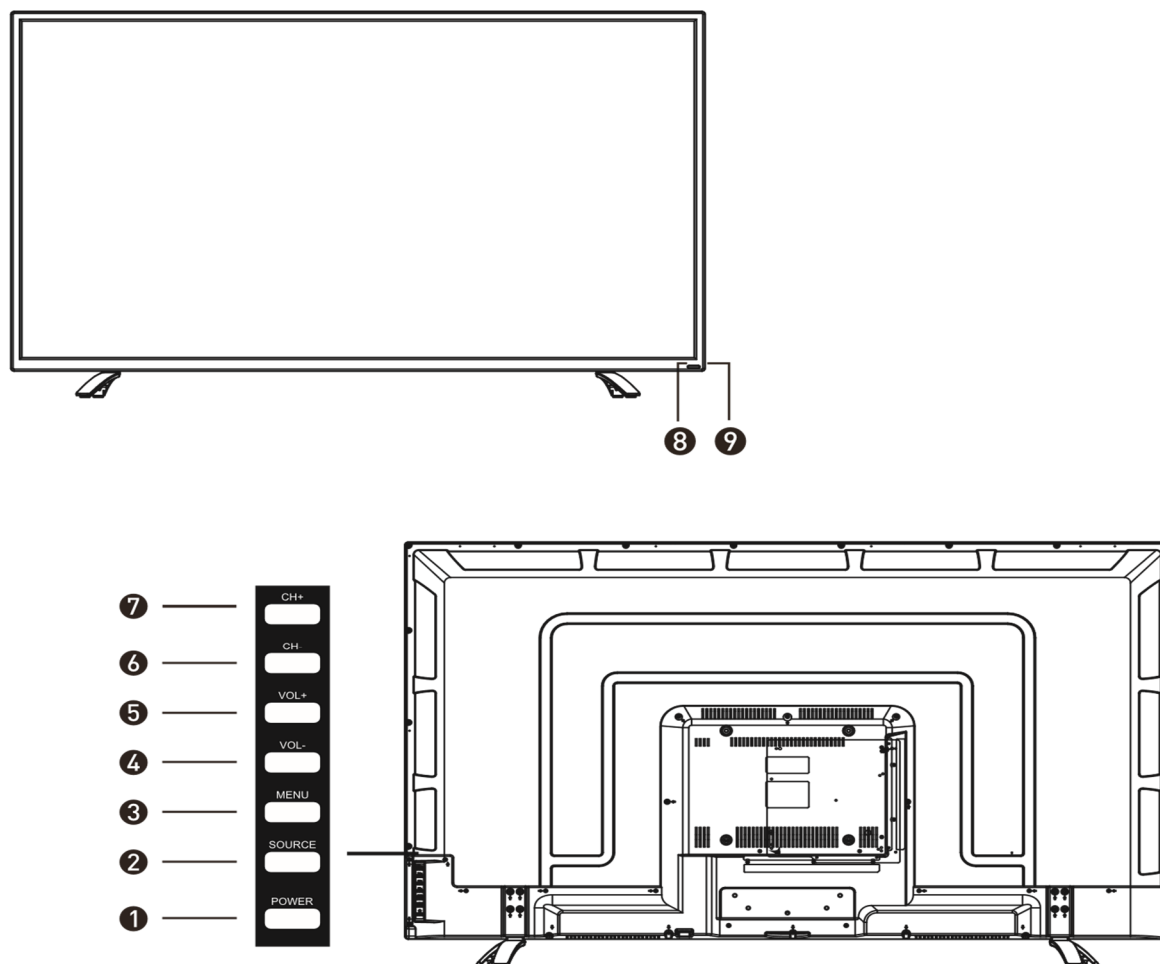


1. **POWER BUTON:** To turn ON/OFF the TV
2. **SOURCE** Button: To select the input source.
3. **MENU** Button: To enter menu setting page.
4. **VOL-:** To decrease the volume level.
5. **VOL+:** To increase the volume level
6. **CH-:** To select previous channel
7. **CH+:** To select next channel
8. Remote Control Sensor
9. **Power Indicator:** In standby mode the indicator light will display red, when switching on the unit the indicator light will display green.

 INPUT / OUTPUT TERMINALS

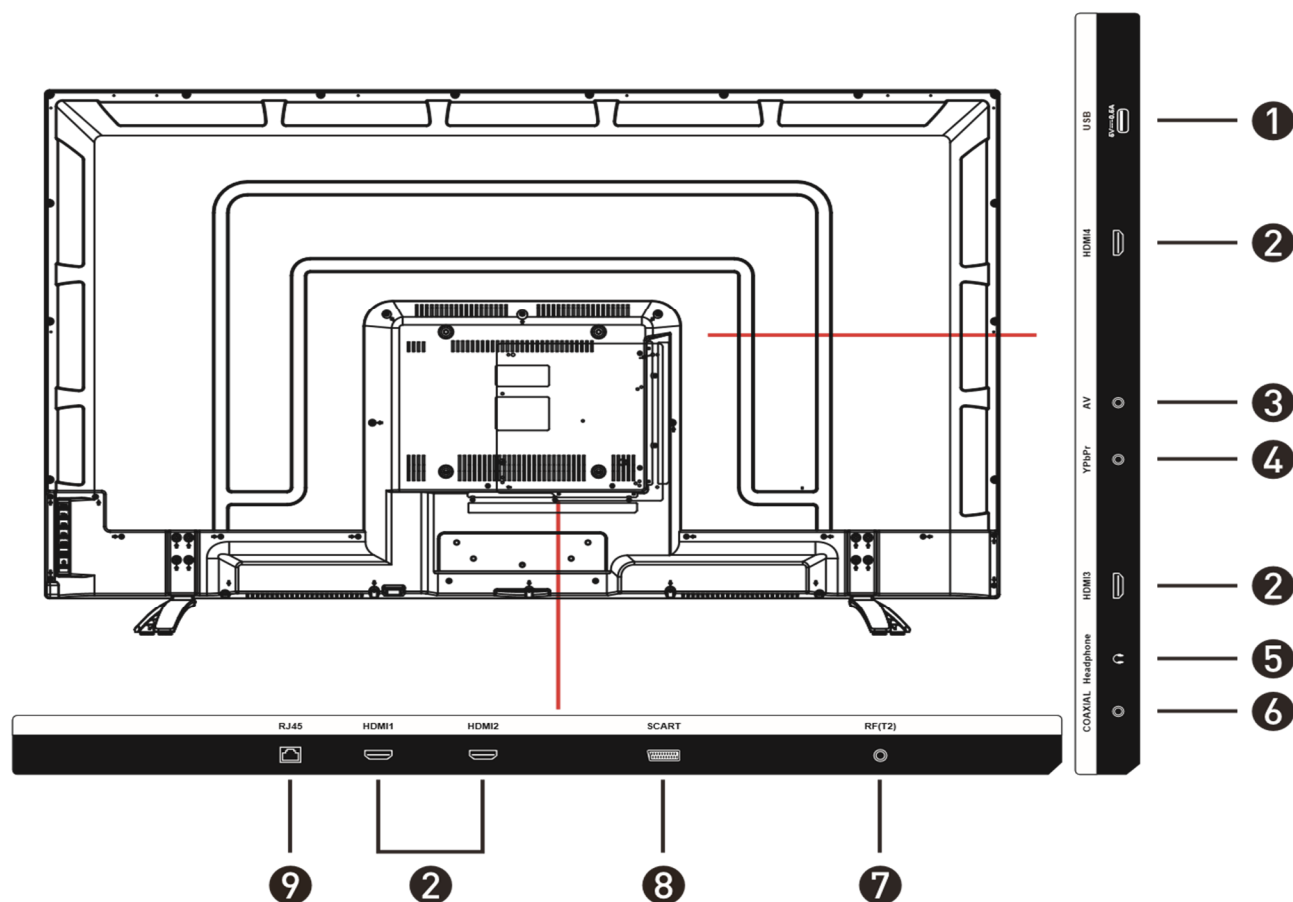

1. USB input slot – for multimedia file playback
2. HDMI input X3
3. AV input terminal
4. YPbPr
5. Headphone output terminal
6. Coaxial output terminal
7. RF input terminals
8. Scart input terminal
9. RJ45 input terminal

 CONNECTING TO EXTERNAL DEVICES

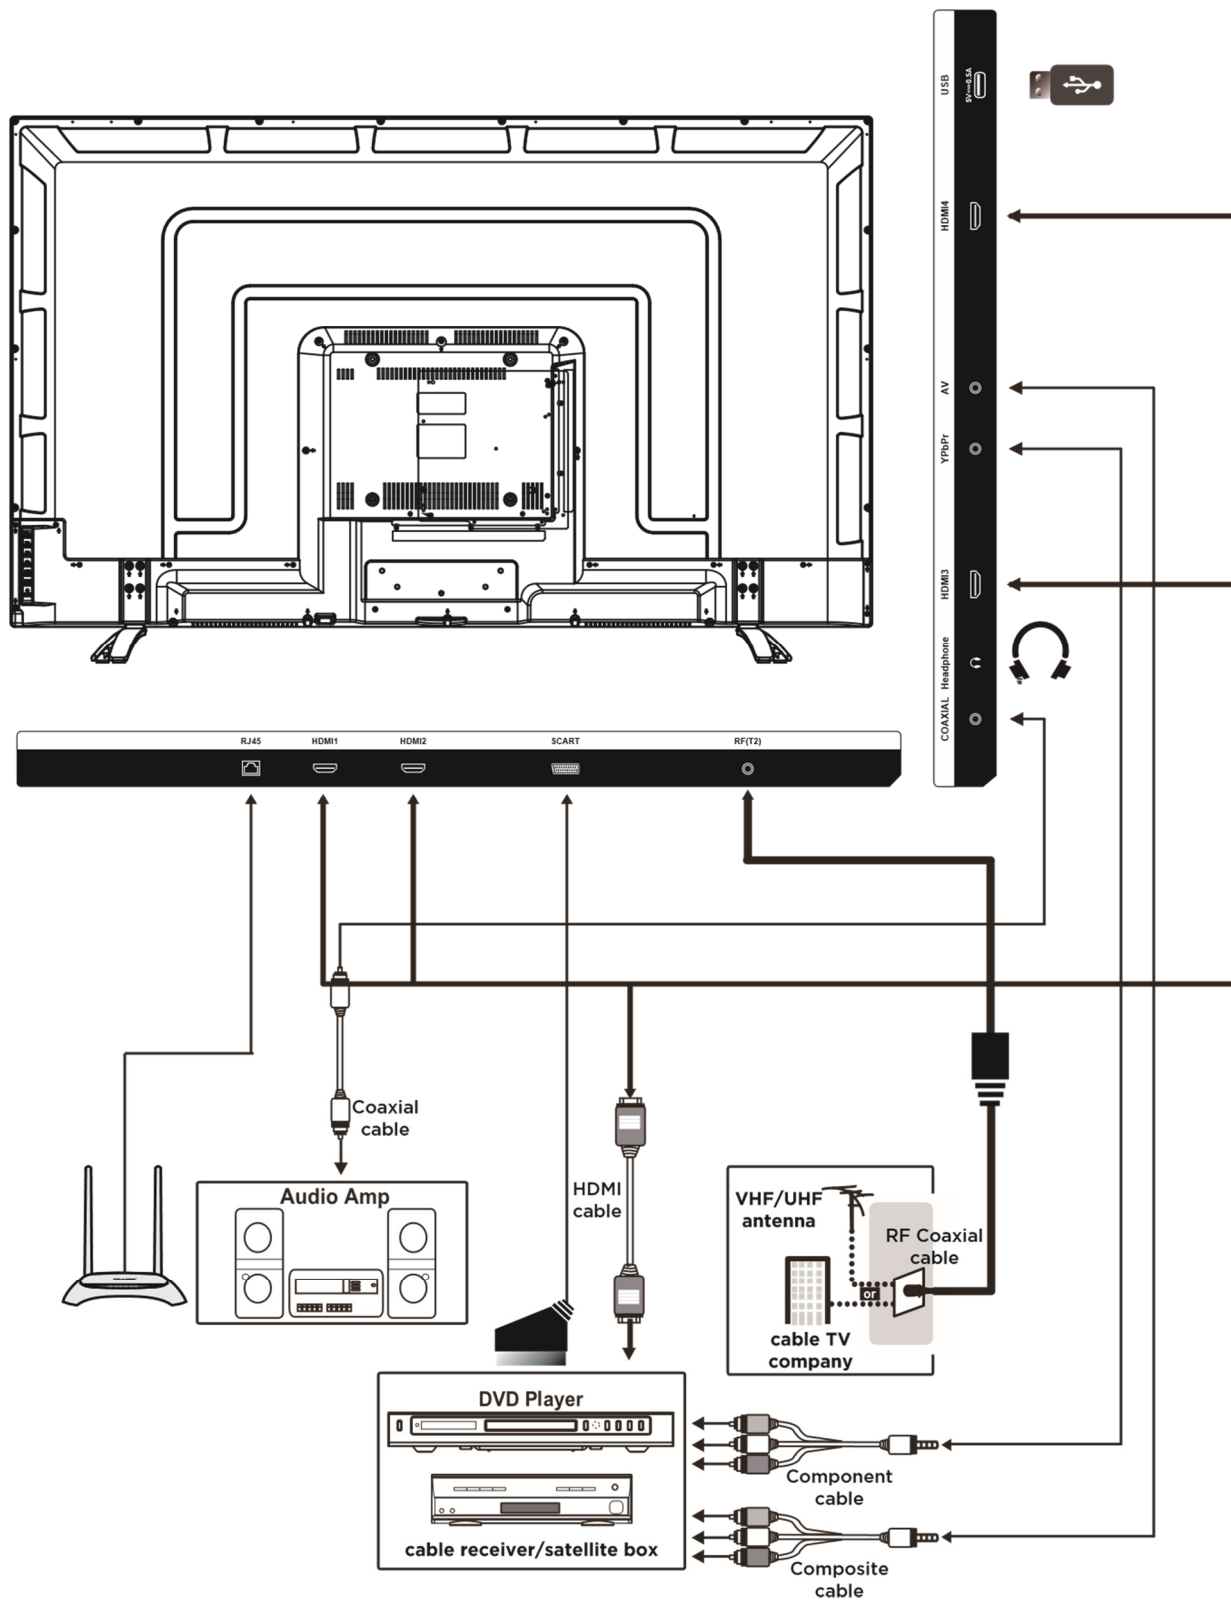




REMOTE CONTROL





 
 




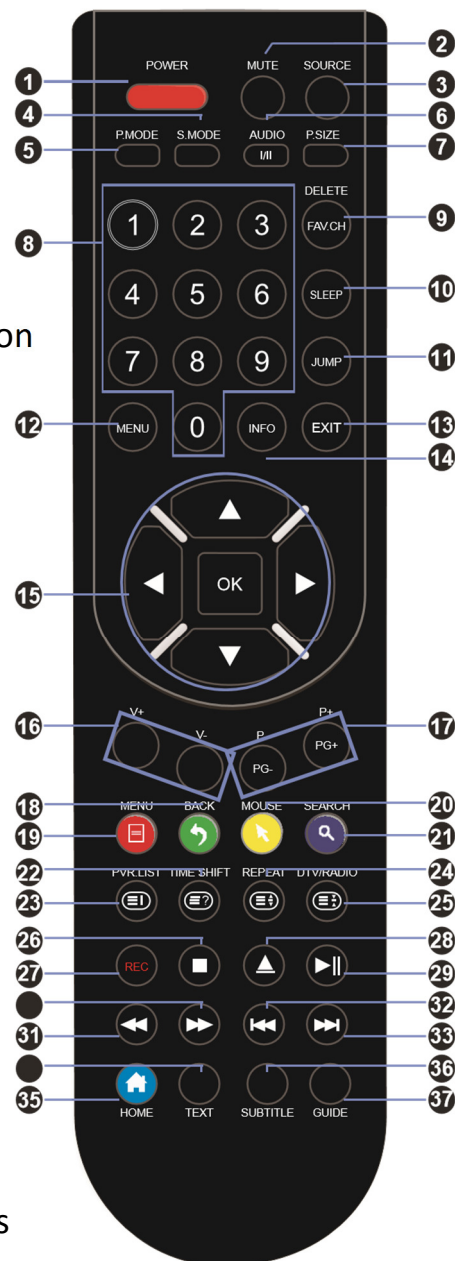

1. POWER: Turn on the TV/Standby
2. MUTE: Mute or restore the sound
3. SOURCE: Press to change the signal source
4. S. MODE: Setting audio options
5. P. MODE: Output image mode selection
6. AUDIO: Switch the audio channel when DVD or multimedia playing. I/II: In the TV mode, press this button to select the stereo size
7. P. SIZE: Press to select the different picture size.
8. NUMBER KEYS: Change the channel
9. FAV. CH: Show the list of favourite channels
10. SLEEP: Auto Power Off Timer
11. JUMP: Return to the previous selected channel
12. MENU: Show settings menu
13. EXIT: Exit the menu
14. INFO: Show information about the current program
15. NAVIGATION KEYS (Up, Down, Left, Right and OK): To move in the menus and confirm settings.
16. V+ / V-: Increase / decrease volume
17. P+ / P-: Next / previous channel
18. REPEAT: Repeat mode
19. Menu
20. Mouse (disabled for non smart models)
- 21.

●
●
●
● Press the appropriate colour to direct access functions in TELETEXT or EPG OSD mode

Menu/Back/Mouse/Search may be disabled on non smart models

 
22. TIME SHIFT: In DTV mode, press TIME SHIFT button to start the delay function, press the  button to start playing delay program, press the  button to terminate the delay function. Time shift function requires USB flash drive or externally powered USB harddrive connected



-  Reveals hidden information such as the answers to a quiz in TELETEXT Mode
- 23. PVR LIST: IN DTV mode, displays the executed PVR LIST.
 -  Displays the main index in TELETEXT mode.
- 24. USB: Press to switch to USB signal source directly.
 -  Displays the top, bottom or all of the page.
- 25. DTV/RADIO: In DTV mode, press DTV/RADIO button to enter DTV or RADIO mode.
 -  Freeze a multi-page selection on TELETEXT mode.
- 26.  Stop Playback
- 27. REC: In DTV mode, press REC button to start recording, press  button stop recording.
- 28.  Eject disc (disabled for non DVD combo models)
- 29.  Play/Pause.
- 30.  Fast Forward playback
- 31.  Rewind playback
- 32.  Previous file or chapter
- 33.  Next file or chapter
- 34. TEXT: Turn on and off the Teletext function
- 35. Home: Press to open the Home Page
- 36. SUBTITLE: Select subtitle of media video file (requires the support of disk or file)
- 37. GUIDE: Show the Electronic Program Guide (EPG)


BATTERY INSTALLATION

1. Open the battery cover.
2. Insert 2 AAA batteries in the battery compartment, matching the polarities correctly.
3. Replace the battery cover.

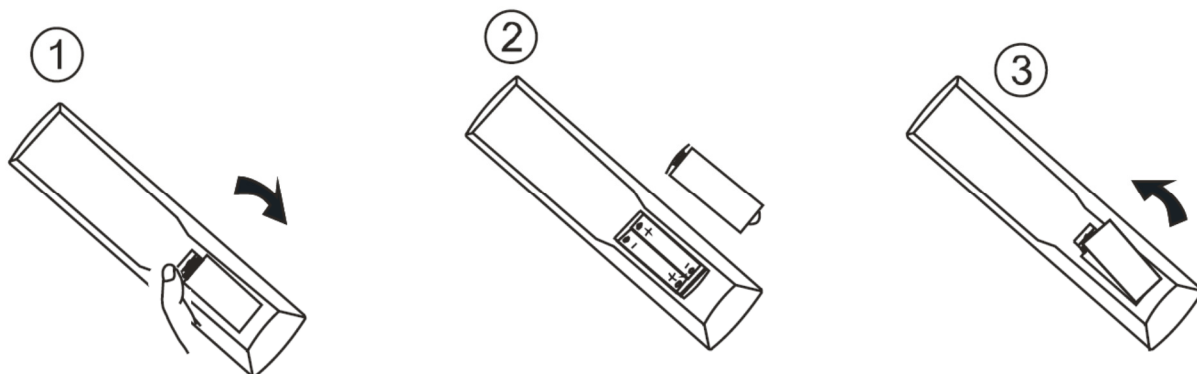

SETTINGS

 INITIAL SETUP

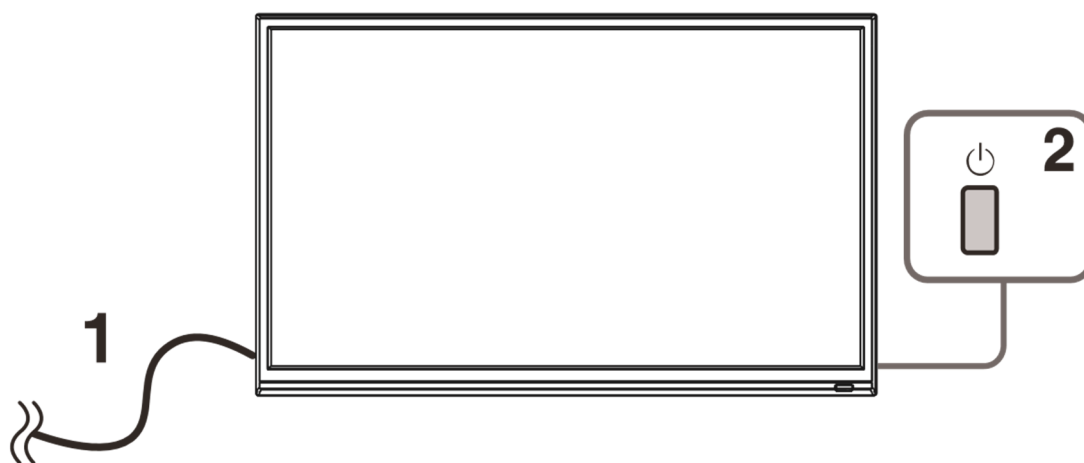

1. Connect the TV set to a power outlet.
2. Press the POWER button on the remote or on the TV set to turn on the TV (the indicator will be lit green)

NOTE: Pressing the power button on the remote or TV set will place the TV into standby mode only. If the TV set is expected to be not in use for a long period of time, please disconnect it from the power source.

- Press the ▼ / ▲ / ◀ / ▶ to choose the preferred item and press OK button to confirm the settings.



SELECT INPUT SOURCE

 
Available options: DTV, ATV, AV, SCART, YPbPr, HDMI 1, HDMI 2, HDMI 3, PC, MEDIA



- Press SOURCE button to display the input source list.
- Press ▲ / ▼ or SOURCE button to select the preferred input source.
- Press OK button to confirm.
- Press EXIT button to exit.



BASIC OPERATIONS

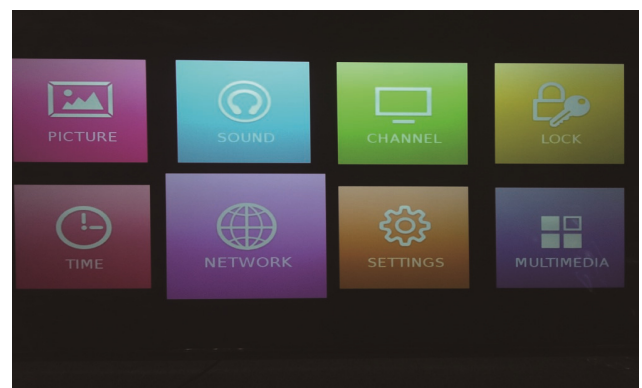- Press the MENU button on the remote control or on the TV to enter the menu page.
- Use ? / ? buttons to select the main menu options.
- Use ▲ / ▼ buttons to navigate up and down within the menu.

 


4. Use the  /  buttons to alter the required setting then press the MENU button to confirm and return to the previous menu page or press EXIT button to exit the menu.

PICTURE MENU



Press MENU button to enter the main menu.

After the preferred settings are done, press MENU button to confirm and return to the previous menu page or press EXIT button to exit the menu.

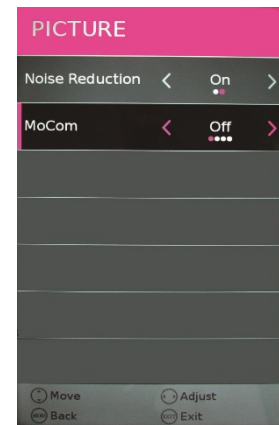

SOUND MENU

  Press MENU button to enter the main menu

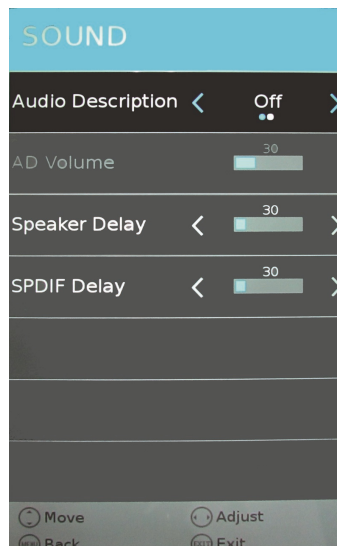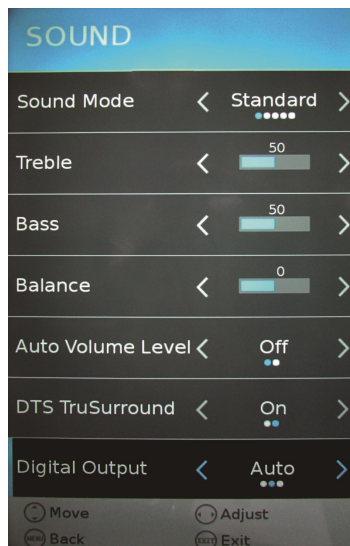

After the preferred settings are done, press MENU button to confirm and return to the previous menu page or press EXIT button to exit the menu.

CHANNEL MENU

Press MENU button to enter the main menu.

Press **?** / **?** button to select Channel in the main menu and press OK then ▼ to enter.

 


1. Press **▲** / **▼** button to select the option that you want to select the preferred item.
2. Press OK button to enter sub-menu
3. Press MENU button to return back to previous menu or press EXIT button to exit the menu

TUNER TYPE

Select the DVB Antenna Type

Press **▲** / **▼** button to select DVB Antenna, then press **?** / **?** button to select the type of antenna, either Antenna or Cable.

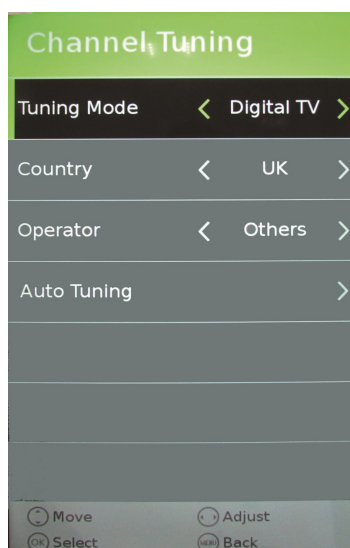

AUTO TUNING

Press ▲ / ▼ to select Auto Tuning then press OK to enter sub-menu.

Country

Press ? / ? button to select country.

Operator

Press ? / ? button to select the operator.

Auto Tuning

 
Press OK / ? button to start the auto searching. It will search digital channels first, then analogue channels.

Before executing auto channel search please make sure the preferred tuner type is chosen. Wrongly setting the tuner type may cause failure to find channels.

Signal Information

View the signal information.


Press ▲ / ▼ button to select signal information, then press the OK button to view the detailed information about the signal.

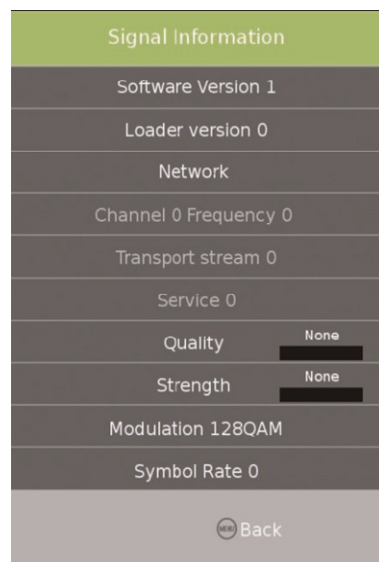



ELECTRONIC PROGRAM GUIDE (EPG)

Press the GUIDE button to enter the EPG menu.

 Press the GREEN button to display the previous day

 Press the YELLOW button to display next day

 
 Press the RED button to record the selected program

 Press the BLUE button to set a reminder for the selected program



LOCK SYSTEM MENU

Press MENU button to enter the main menu and select “Lock”.

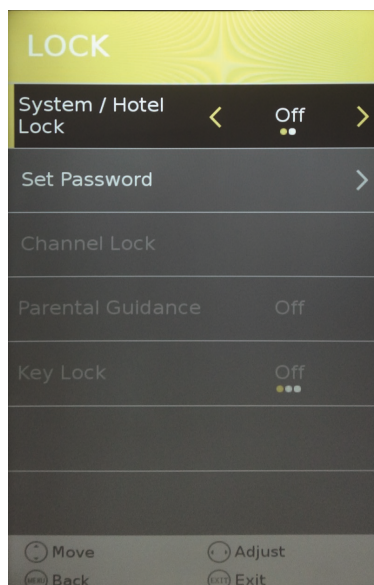

The default password is “0000”.

TIME MENU

Press MENU button to enter the main menu and select “Time”



Off Time: Set the time for the TV to turn off automatically.

On Time: Set the time for the TV to turn on automatically.

Sleep timer: Set the time after which the TV will switch off. Either: Off, 10min., 20min., 30min., 60min., 90min., 120min., 180min.

OSD Timer: Set the time at which the on screen display (OSD) turns off. Either: Off, 5secs., 15secs., 30secs., 60secs.

Auto Sleep: Set the time at which the TV goes off after being idle. Either: Off, 3 hours, 4 hours, 5 hours.

NETWORK MENU

Press MENU button to display the main menu.

Press / button to select Network in the main menu.

Press / button to select the option that you want to adjust in the Network menu.

 
 
Press Enter button to adjust.

After finishing your adjustment, press the Enter button to save and return to the previous menu.

IP CONFIGURATION

Press / button to select IP Config.


Press Enter button to set the IP Configuration.

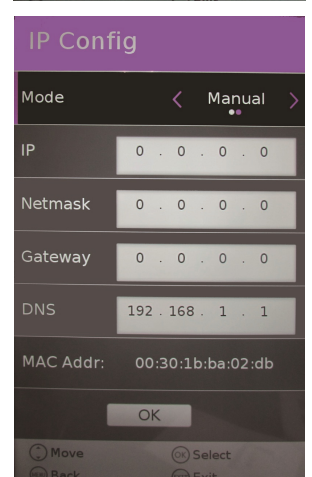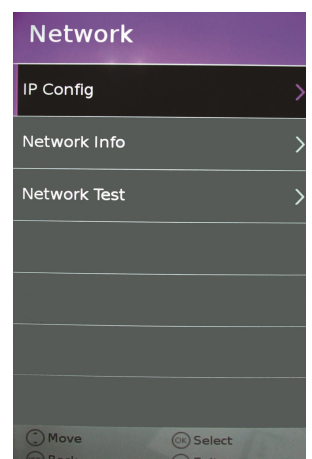

NETWORK INFO

Press ▲ / ▼ button to select Network Info.

 Press the Enter button to view the WiFi network information.

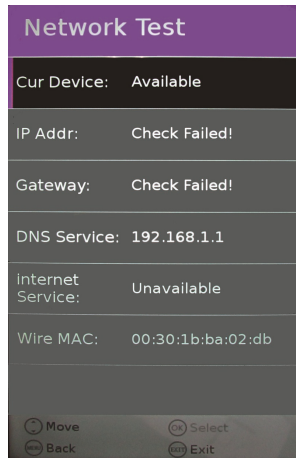

Network Test	
Cur Device:	Available
IP Addr:	Check Failed!
Gateway:	Check Failed!
DNS Service:	192.168.1.1
Internet Service:	Unavailable
Wire MAC:	00:30:1b:ba:02:db
⏪ Move	⏩ Select
⏪ Back	⏩ Exit

 
NETWORK TEST

Press ▲ / ▼ button to select Network Test.

Press enter button to test the WiFi Network.

NOTE:


For non smart models network function is not in use and reserved for service centre or OTA firmware upgrades.

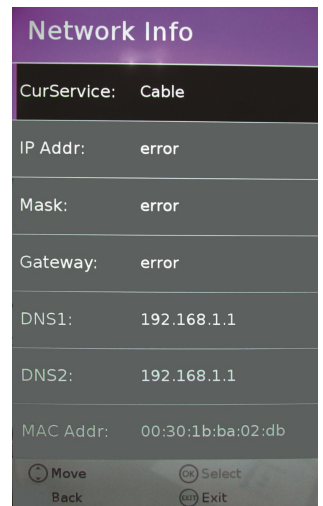

Network Info	
CurService:	Cable
IP Addr:	error
Mask:	error
Gateway:	error
DNS1:	192.168.1.1
DNS2:	192.168.1.1
MAC Addr:	00:30:1b:ba:02:db
⏪ Move	⏩ Select
⏪ Back	⏩ Exit

SETTINGS

 Press MENU button to enter the main menu and select “Settings”.

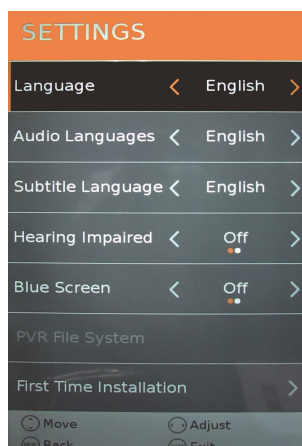


Change the settings as required using the \leftarrow / \rightarrow buttons.

Press the MENU button to confirm the changes and return to the previous menu page or press EXIT button to exit the menu.

USB OPERATION

Before the external USB device is connected to the TV please first press SOURCE button and set the input source to MEDIA.

 
Insert USB device.

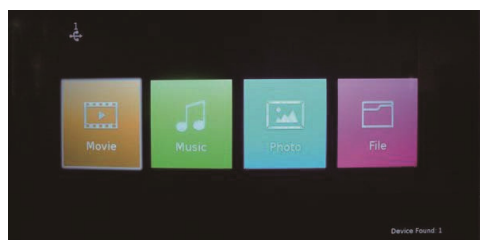

Press \leftarrow / \rightarrow button to select the item you require and press OK to enter.

Photo

 Press \blacktriangle / \blacktriangledown button to select the file you wish to display then press OK button to enter.

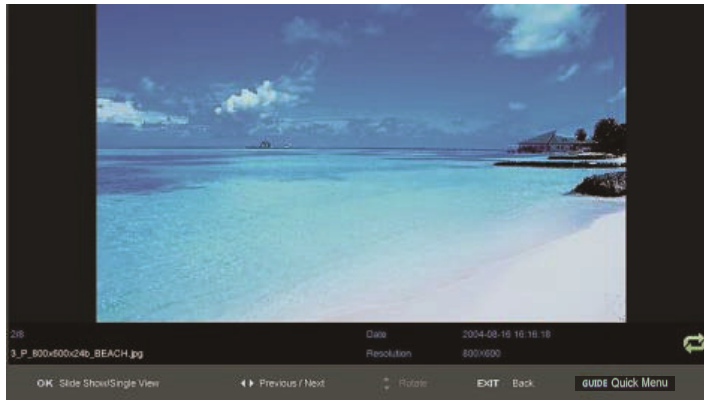

Press OK button to start a slideshow.

Press the / button to select the previous/next image.

Press EXIT to go back to the menu.

Music

Press the / button to select the file you wish to play then press OK button to enter.

- | | | | |
|--|-----------------|--|---------------|
| | Play or pause | | Rewind |
| | Previous track | | Fast Forwards |
| | Next track | | Stop |
| | Repeat | | Show playlist |
| | Show Track info | | |

 
Press CH+/- to switch between Playlist and Play Screen

Press / to change page and press OK button to start playing

Press EXIT button to exit to previous menu.

Movie

Press / button to select the file you would like to play then press OK button to enter. Press / button to select return option to go back to the previous menu.

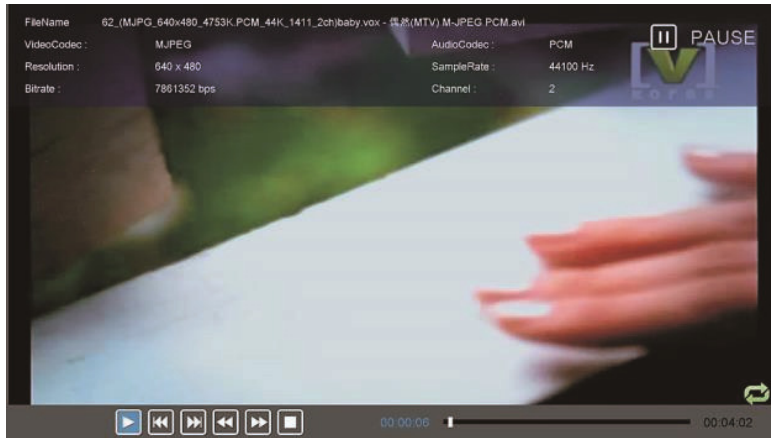

- | | | | |
|--|------------------|--|------------------|
| | Play or pause | | Rewind |
| | Previous file | | Fast Forwards |
| | Next file | | Stop |
| | Repeat the movie | | Set Play Time |
| | Zoom in | | Zoom out |
| | Show Playlist | | Show Information |

Press EXIT button to exit to the previous page.

File

Press ▲ / ▼ button to select the file you would like to play then press OK button to enter.

Press ⏪ / ⏩ button to select the file you would like to play then press OK button to enter.

Press EXIT button to go back to the previous menu.

TROUBLESHOOTING

Problem	Solution
No power	Insert the power plug securely into the power outlet.
No picture	Ensure that the equipment is connected properly.
Distorted or no sound	<ul style="list-style-type: none"> • Ensure the equipment is connected properly • Ensure that the input setting for the TV and stereo system are correct. • Adjust the master volume to a suitable volume by pressing V+/V- button. • Check audio settings are correct. • Check set isn't muted.

	<ul style="list-style-type: none"> • Unplug headphones • Check the antenna connection.
Remote control not working	<ul style="list-style-type: none"> • Check the batteries are installed with the correct polarities. • Replace the batteries with new, fully charged ones. • Point directly at the remote sensor on the TV and try again. • Operate at a distance of no more than 6m. • Remove any obstacles between the remote control and the sensor.
Buttons on the TV don't do anything	Disconnect the power plug and then reconnect it. (The unit may not be operating properly due to lightning, static, or other factors.)
Poor picture or no picture	<ul style="list-style-type: none"> • Adjust the indoor aerial, use an amplified aerial or external digital antenna. • Have the DTV antenna checked or installed by a professional installer • Move anything that may cause interference. • Retry Auto tuning the unit. • Try another channel.
Noise or other interference	Electronic equipment near the unit may be causing interference. Relocate the unit or move the equipment.

SPECIFICATIONS

Panel	55"/ 65" LED panel
Resolution (pixels)	3840 x 2160
Pixel Pitch (mm)	0.1903(H)x0.5708(V)
Aspect Ratio	16:9
Contrast Ratio	4000:1 (55") 4500:1 (65")
Luminance	320cd/m ² (55") / 350cd/m ² (65")
View Angle	178(H) / 178(V)
Response Time	8ms
Life Time	30,000 Hours
Input Terminals	RF (T2) x1 USB x1 AV (Video) x1 Component (YPbPr) x1 SCART x1 RJ45 x1 HDMI x4
Output Terminals	Coaxial x1 Earphone x1

TV System

Receiving Range	48.25~863.25 MHz
Input Impedance	75Ω
Video System	PAL, DVB-T2+C
Sound System	BG, DK, I, L/L; NICAM/A2
Storage Channels	100CH
Teletext	1000pages

DTV System

Receiving Range	VHF: 50~230MHz
	UHF: 474~862MHz
Input Impedance	75Ω
Channel Bandwidth	7 MHz / 8 MHz
Modulation	DVB-T: COFDM 2K/8K QPSK, 16QAM, 64QAM
	DVB-C: 16QAM, 32QAM, 64QAM, 128QAM, 256QAM
Video System	MPEG-2 MP@HL, MPEG-2 MP @HL H.264
Sound System	MPEG-1 Layer 1/2, MPEG-2 Layer 2, DD, DD+
Basic Function	EPG, Subtitle, Teletext

Video Input / Audio Output

Video Input	
AV Colour System	PAL / DVB-T2+C
YPbPr Format	480i, 480p, 576i, 576p, 720p, 1080i, 1080p
HDMI Input format	480i, 480p, 576i, 576p, 720p, 1080i, 1080p, 4K
Audio Output	
Frequency Response	100Hz~15KHz @ +/- 3db (1KHz, 0dB reference signal)
Class D	2 x8W@8ohm THD<10%

Multimedia Playback Format

Multimedia Categories	File Extension
Video	AVI, MPEG 1/2, MPEG-4, WMV, TS
Music	WMA, AAC, AC3, MP3
Photo	JPEG, BMP, PNG, GIF
Text	TXT

Remote Control

Signal Type	Infrared
Control Distance	6 meters
Control Angle	30° (Horizontal)
Power Supply	AAA 1.5V x 2

Others

Language	English
Power Source	AV 100~240V, 50/60Hz
Power Consumption	<140W
Power Saving	<0.5W
Operating Temperature	-5°C to 45°C
55" Dimensions (mm)	1250.8(W) x 308.8(D) x 781.9(H)mm – with stand
	1250.8(W) x 87.6(D) x 729.5(H)mm – without stand
65" Dimensions (mm)	1462.1(W) x 308.8(D) x 897.6(H) – with stand
	1462.1(W) x 73.8(D) x 848.5(H) – without stand

electriQ UK SUPPORT

Complete online support form on www.electriQ.co.uk/support

Service Line: 0871 620 1057

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk

Unit 2, The Nursery

Berristow Lane South Normanton

Derbyshire, DE55 2FX

PRODUCT DISPOSAL

Do not dispose this product as unsorted waste. Collection of such waste must be handled separately as special treatment is necessary.



Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.