

QUICK START MANUAL_EN
SCHNELLSTARTANLEITUNG_DE



RugGear®
RG500



CONTENT

SAFETY INSTRUCTIONS

1	Introduction	5
2	Faults and damages	6
3	Further safety advises	7

QUICK START

4	Keys	9
5	First steps	10
5.1	Battery	10
5.1.1	Installing and extracting the battery	10
5.1.2	Charging the battery	11
5.1.3	Battery use	11
5.2	Installation of the SIM cards	12
5.3	Installation of the microSD card	12

FIRST USE

6	First use	12
6.1	Powering on your phone	12
6.2	Powering off your phone	13
6.3	Locking and unlocking the phone	13
6.4	Using the touchscreen	14
6.5	Connecting the phone with a computer	15

DISPLAY LAYOUT

7	Display layout	15
7.1	Status bar	16
7.1.1	Notification panel	17
7.2	Quick access panel	18
7.3	Home screen	18
7.3.1	Adding a new screen item	18
7.3.2	Moving a screen item	19
7.3.3	Removing a screen item	19
7.3.4	Creating a folder	19
7.3.5	Renaming a folder	19
7.3.6	Changing the wallpaper	20

INFORMATION

8	Specifications	20
9	Troubleshooting	21
10	Maintenance	23
11	SAR	24
	Service center	26

RESERVATION

Technical Data is subject to change without notice. Changes, errors and misprints may not be used as a basis for any claim for damages.

All rights reserved.

RugGear Europe GmbH cannot be held responsible for any data or other loss and direct or indirect damages caused by any improper use of this phone.

This document contains a quick start guide and the safety instructions necessary for the safe use of the smartphone **RG500**.

More detailed instructions on the use of the phone can be found at **www.ruggear-europe.com** or directly at our Service Centre.

(C) 2014 RUGGEAR EUROPE GMBH

DW3140819

1_INTRODUCTION

This document contains information and safety regulations which are to be observed without fail for safe operation of the smartphone **RG500** under the described conditions.

The current EC declaration of conformity, EC certificate of conformity, safety instructions and manual can be found at **www.ruggear-europe.com**, or requested from RugGear Europe GmbH.

NOTE

This document contains only the instructions necessary for setting up and safe use of your phone. A complete Quick Start Manual can be found at **www.ruggear-europe.com**.

To ensure the IP protection of the phone please make sure that the seals of the battery, the USB port cover and all the screw covers are in their correct place.

Please consult page 15 to learn how to access the phone from any computer.

2_FAULTS AND DAMAGES

If there is any reason to suspect that the safety of the phone has been compromised, it must be withdrawn from use immediately.

Measures must be taken to prevent any accidental restarting of the phone.

The safety of the phone may be compromised if, for example:

- ✦ malfunctions occur.
- ✦ the housing of the phone or the battery shows damage.
- ✦ the phone has been subjected to excessive loads.
- ✦ the phone has been stored improperly.

3_FURTHER SAFETY ADVISES

- ✦ Do not touch the screen of the phone with sharp objects. Dust particles and dirt may scratch the screen. Please maintain the screen clean. Remove dust on the screen with a soft cloth gently and do not scratch the screen.
- ✦ Charge the phone under indoor conditions only.
- ✦ Please do not put the phone in environments with excessive temperatures as this could lead to heating of the battery, resulting in fire or explosion.
- ✦ Do not charge the phone near any flammable or explosive substances.
- ✦ Do not charge the phone in environments with much dust, humidity, or excessively high or low temperatures (the permitted charging temperature range is 0 °C – 45 °C).
- ✦ Do not use the phone in areas where regulations or legislatives prohibit the use of a mobile phone.
- ✦ Do not expose the phone, the battery or the charger to strong magnetic fields, such as are emitted from induction ovens or micro-waves.
- ✦ Do not attempt to open or repair the phone. Improper repair or opening can lead to the destruction of the phone, fire or explosion. Only authorized personnel are allowed to repair the phone.
- ✦ Only use accessories approved by RugGear Europe GmbH.
- ✦ Please do not connect the poles of the battery directly, to avoid short-circuiting the battery.
- ✦ Power off the phone in hospitals or other places where the use of mobile phones is prohibited. This phone may affect proper work of medical equipment, like pacemakers, so always keep a distance of at least 15 cm between the phone and these devices.

- ✦ Observe all corresponding laws that are in force in the respective countries regarding the use of mobile phones while operating a vehicle.
- ✦ Please power off the phone and disconnect the charging cable before cleaning the phone.
- ✦ Do not use any chemical cleaning agents to clean the phone or the charger. Use a damp and anti-static soft cloth for cleaning.
- ✦ Do not discard old and abandoned lithium batteries into the trash, send them to designated waste disposal locations or return them to RugGear Europe GmbH.
- ✦ The user alone is responsible for any and all damages and liabilities caused by malware downloaded when using the network or other data-exchange functions of the phone. RugGear Europe GmbH cannot be held responsible for any of these claims.

WARNING

RugGear Europe GmbH will not assume any liability for damages caused by disregarding any of these advices or by any inappropriate use of the phone.

4_KEYS



1_Power:

Lock the phone. Long press to power on and off the phone.

2_Menu:

Bring up a list of options.

3_Home:

Returns to the Home Screen. Long press to see a list of last accessed apps.

4_Back:

Return to the previous screen.

5_Volume:

Context-sensitive volume regulation.

6_SOS:

prepared for emergency call function, additional paid application necessary.

7_PTT:

prepared for push to talk function, additional paid application necessary.

NOTE

You can find our recommendations of PTT and SOS applications under: www.ruggear-europe.com

5_FIRST STEPS

5.1_BATTERY

The battery is inserted into the back of the phone. The battery is not fully charged when the phone is purchased, but it contains enough energy to power on the phone. To obtain best battery performance and battery life, let the battery discharge completely before charging it completely for the first three charging cycles.

5.1.1_INSTALLING AND EXTRACTING THE BATTERY

When installing the battery, insert the teeth at the bottom of the battery into the corresponding notches of the phone, then put the battery inside and press the battery down. Next, insert the battery cover in the same way and secure it by turning the two screws with the delivered screw driver. Ensure that both – battery and battery cover – is safely in place before powering on the phone.



5.1.2_CHARGING THE BATTERY

- Connect the USB-cable with the phone as indicated in the picture.
- Connect the plug with the socket of the Power Supply.
- After charging, remove the USB-cable from the charger.



5.1.3_BATTERY USE

In actual use, the standby time and talk time of the phone varies with the network status, working environment and usage.

When the power of the battery is lower than normal, the phone will prompt you to charge it. Please charge the battery; otherwise you may lose any files which have not been saved.

If you do not charge for a long time, the phone will be powered off automatically.

WARNING


The phone may only be charged at ambient temperatures in a range from 0 °C – 45 °C. Please do not use charging equipment if the temperature exceeds this range. Only use the RugGear approved USB-cable and charger.

5.2 INSTALLATION OF THE SIM CARDS

The phone features two SIM card slots (1, 2). If you have installed two SIM cards, you can choose your primary card in *Settings* → *SIM management*.

5.3 INSTALLATION OF THE MICRO-SD CARD

Open the microSD card holder, and insert the microSD card into the slot (3), then close the microSD card holder.

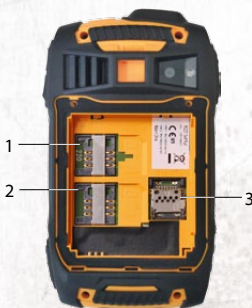

WARNING

Do not try to insert or remove any of the SIM cards when any external power supply is connected, otherwise the SIM cards or the phone may be damaged.

6 FIRST USE

6.1 POWERING ON YOUR PHONE

Press the *Power key* until the screen lights up.


Depending on the security settings of your SIM card, the phone may ask you for your personal identification number (PIN) before starting up.

The first time you power on your phone, you may be prompted to assign a language, a date and a time zone and to enter your personal information.

You will also be asked to sign in or set up your Google™ account. You can do this later but please note that some of the functions of the phone like the Google Play™ Store depend on a Google™ account.

6.2_POWERING OFF YOUR PHONE

1. Press and hold the *Power* key to open the Phone options menu.



2. Tap *Power off*.
3. Tap *OK*.

6.3_LOCKING AND UNLOCKING THE PHONE

- Press the *Power* key to lock the phone. When the screen is locked, you can still receive messages and calls.

If you leave your phone undisturbed for a while, the screen will lock automatically.

- To unlock the phone, press the *Power* key again. After the screen has lit up, drag the lock icon to the unlock icon to unlock the phone.

Depending on your security settings, the phone may ask for a PIN to unlock. Please note that this is NOT the PIN of your SIM card, but a code that can be assigned under *System settings* → *Security* → *Screen lock*.

6.4 USING THE TOUCHSCREEN

This phone features a capacitive touchscreen. It is not necessary to press the screen for it to work, a simple touch is enough.

The following gestures can be used with this phone:

Tap

To open an application (app), or to enter a character using the on-screen keyboard, tap it with a finger.

Tap and hold

Tap and hold your finger to the screen for more than two seconds to access further options where available.

Drag

Tap an icon and hold your finger to the screen. Then drag it to where you would like to place it.

Double tap

Perform two taps onto a webpage or image to zoom in. Double tap again to zoom out.

Flick

Touch the screen and flick your finger left, right, up or down to scroll through available panels or lists.

Pinch

Touch the screen with two fingers near together. While touching the screen, put your fingers farther apart to zoom into a webpage or picture. Do the reverse to zoom out again.

6.5_CONNECTING THE PHONE WITH A COMPUTER

You can access the microSD card of the phone by any compatible computer via the USB cable. The card will be accessed as a mass storage device.


1. Connect your phone to the computer with the USB cable.
When connecting the phone to a computer for the first time, the computer will install the necessary drivers automatically.
2. Tap *turn on USB storage* in the dialogue box that opens on the phone and tap *OK* to confirm your choice. Your computer will detect the microSD card as a removable disc. You can now transfer files from and to the microSD card.

NOTE

While USB mass storage function is enabled, some functions of the phone may not be available.

7_DISPLAY LAYOUT

After you sign in or when you power on the phone, by default the Home Screen opens:

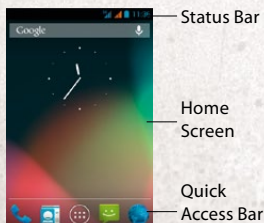

The Home Screen is your starting point to access all the features on your phone. It displays application icons, shortcuts and other features. You can customize the Home Screen and display the items you need.

7.1 STATUS BAR

The status bar appears at the top of every screen.

On the right side, it displays phone status icons, such as the status of the battery, GPS, data or mobile connections and the time.

On the left side, it displays notification icons, such as missed calls or received messages.

STATUS ICONS



SIM1 or SIM2 current signal status, type (E for Edge, 3G for UMTS, H for HSDPA) and strength



Wi-Fi connection status and signal strength



Bluetooth® connection status



Airplane mode (all wireless interfaces are off)



Battery power level indicator



GPS is receiving location data



Vibration alert only



Silent mode (no ringtone, no vibration alert)

NOTIFICATION ICONS



Missed calls



One or several new e-mails



One or several new SMS




Alarm clock active



USB connection established

7.1.1_NOTIFICATION PANEL

Drag the Status Bar down to reveal the notification panel:

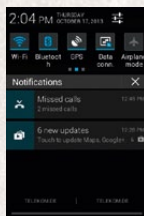

Your phone will notify you here when you receive a new message or when there is an upcoming event. The notification panel also informs you about alarms, settings and other relevant information.

Tap a notification to open a related application.

To remove notifications from the panel, swipe the notification to the left or to the right side of the panel.



Use the *settings icon* in the top right corner of the notification panel to access system settings.

To close the notification panel, drag the bottom of the panel to the top of the screen.

7.2 QUICK ACCESS PANEL

Shortcuts to apps placed here are visible on every panel of the Home Screen.



Tap on the *App icon* to open up the App Drawer. Here you can start any App with a tap on its icon.

7.3 HOME SCREEN

Here, you can place shortcuts to apps and widgets.

Widgets are small applications that provide functions and information on your Home Screen, like local weather, stock exchange information or email previews. To use them, add widgets from the App drawer in the Quick Access Panel.

NOTE

Some widgets connect to web services which might result in additional charges.

7.3.1 ADDING A NEW SCREEN ITEM

1. Tap on the *App icon* to open up the App Drawer.
2. Scroll for the app or widget you would like to add by flicking the screen left or right.
3. Tap and hold the icon of the item you want to use and wait until the screen changes to show your Home Screen.
4. Move the item to the desired place and lift your finger. To change to a different panel of yours Home Screen, move the item to the right or left border of the screen.

7.3.2 MOVING A SCREEN ITEM

1. Touch and hold an icon on the Home Screen until the icon enlarges.
2. Without lifting your finger, drag the icon to the desired position on the screen and release it.

NOTE

There must be enough space for the icon to fit on the current Home Screen.

7.3.3 REMOVING A SCREEN ITEM

1. Tap and hold an application icon on the Home Screen until the icon enlarges.
2. Drag the item to the top of the screen towards *Remove*.

7.3.4 CREATING A FOLDER

Drag the application icon or shortcut and drop it on top of another app icon. A folder containing both icons will be created. You can then add other icons into the folder.

7.3.5 RENAMING A FOLDER

1. Tap a folder to open it.
2. Tap the title bar of the folder.
3. Enter the new folder name.
4. Tap *Done* or press the *Back* key.

7.3.6_CHANGING THE WALLPAPER

On the Home Screen, tap and hold the screen to show options for the Wallpaper.

8_SPECIFICATIONS

Frequencies

Quad band
GSM/GPRS/EDGE
850/900/1800/1900 MHz
WCDMA/HSPA
900/2100 MHz

Dimension

weight: 206 g,
size: 124 x 68.5 x 24 mm

Screen

3.2" (8.13 cm) RugDisplay-
Glass, rugged TFT-touch-
screen with a resolution of
320 x 480 pixel

Cameras

5 MP rear camera
0.3 MP front camera

Loudspeaker

amplified 3 watt, with 100 dB

Wireless technologies

Bluetooth®, Wi-Fi®, GPS, NFC

Battery

2060 mAh, standby 300 hrs.,
talktime 2G/3G:
468 min./210 min.

Memory

internal memory 4 GB ROM,
512 MB RAM, external
memory microSD up to 32 GB

Processor

MT6572 (Dual Core 1.2 GHz)

Temperature

operation range from
-20 °C to 60 °C

IP68

waterproof: 30 min. up
to 2 m, impervious to dust
and microparticles

MIL-STD-810G

2 m drop-protection,
impervious to dust and
microparticles

9_TROUBLESHOOTING

If problems occur when using the mobile, please try the following tips. If the problem is not solved, please contact your vendor or RugGear Europe GmbH directly.

THE PHONE CANNOT BE POWERED ON

- ✦ **The battery voltage is too low.**
Please recharge the battery.
- ✦ **The power on key is not pressed long enough.**
Please press power on key for more than three seconds.
- ✦ **The connection to the battery is bad.**
Please assemble the battery again or clean the contact points of the battery carefully.
- ✦ **The SIM card has a failure.**
Please check or replace the SIM card.

THE PHONE HAS INSUFFICIENT STANDBY TIME

- ✦ **The battery performance is reduced because of the age of the battery.**
Please contact your vendor or RugGear Europe GmbH for a replacement battery.
- ✦ **Too many programs running.**
Please reduce the number of running programme.

THE PHONE IS NOT CHARGING

✦ **Poor electrical contact.**

Please check and replace any dirty or broken plugs.

✦ **Input voltage is too low.**

Please charge for about one hour first, remove the plug, wait a minute and then continue charging. During this time it is possible that the phone cannot be powered on, as the voltage is too low.

✦ **A battery fault has occurred.**

Please replace the battery.

FAILURES DURING CALLS OCCUR

✦ **SIM Card failures occur.**

Please check the contacts of the SIM card or replace the card.

✦ **Network error.**

Please change to a network provider with a stronger signal.

OTHER PEOPLE ARE ANSWERING MY CALLS

✦ **The phone has been set into divert your calls to another phone number.**

Please check and cancel call divert.

THE PHONE POWERS OFF AUTOMATICALLY

✦ **The charge of the battery is too low.**

Please recharge the battery.

✦ **There was an error during operation.**

Please restart the phone. If the problem reoccurs, please contact your vendor or RugGear Europe GmbH directly.

10_MAINTENANCE

Thank you for using the **RG500**. If there is a problem with the phone, please contact your vendor or consult the service center. If your phone is in need of repair, you can either contact the service center or your vendor.

TRADEMARKS

- ✦ RugGear (Europe) and the RugGear (Europe) logo are registered trademarks of RugGear Europe GmbH.
- ✦ The Android logo, Google™ and Google Play™ Store are registered trademarks of Google, Inc.
- ✦ The Android robot is reproduced or modified from work created and shared by Google™ and used according to terms described in the Creative Commons 3.0 Attribution License.
- ✦ Bluetooth® is a registered trademark of Bluetooth SIG, Inc. worldwide.
- ✦ Wi-Fi® is a registered trademark of the Wi-Fi Alliance.
- ✦ All other trademarks and copyrights are the properties of their respective owners.

RECYCLING

The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste.

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help to prevent uncontrolled waste disposal and to promote the recycling of materials.

More detailed information is available from the product retailer, local waste authorities, national producer responsibility organizations, or your local RugGear Europe GmbH representative.

The content of this document is presented as it currently exists. RugGear Europe GmbH does not provide any explicit or tacit guarantee for the accuracy or completeness of the content of this document, including, but not restricted to, the tacit guarantee of market suitability or fitness for a specific purpose unless applicable laws or court decisions make liability mandatory. RugGear Europe GmbH reserves the right to make changes to this document or to withdraw it any time without prior notice.

11_ SPECIFIC ABSORPTION RATE (SAR) CERTIFICATION INFORMATION

This device meets international guidelines for exposure to radio waves

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption, or SAR. The SAR limit for mobile devices is 2.0 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

Maximum SAR for this model and conditions under which it was recorded

✦ SAR (head)	0.650 W/kg (GSM1800)
✦ SAR (body - worn)	0.807 W/kg (GSM900)

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

A body-worn SAR test has been performed on this device at a separation distance of 1.5 cm. To meet RF exposure guidelines during body-worn operation, the device must be positioned at least 1.5 cm away from the body.

Organizations such as the World Health Organization and the US Food and Drug Administration have suggested that if people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the head and body during use, or they could reduce the amount of time spent using the device.



Notified Body Directive 99/5/EC
Notified Body EMC Directive 2004/108/EC
RFCAB under the Japan-EC MRA
FCB under the Canada-EC MRA
TCB under the USA-EC MRA

EC Identification No. 0678



Bundesnetzagentur

Recognized by the German Regulator
to act as a Notified Body in accordance with the
R&TTE Directive 1999/5/EC of 9. March 1999

BNetzA-bS-02/51-54

R&TTE STATEMENT OF OPINION

Registration No. G109691D

Certificate Holder Power Idea Technology (Shenzhen) Co., Ltd.
1401A, Building 8, Bin Hai Zhi Chuang Garden
Huangdong Road and Xihuan North Road
NanShan District, ShenZhen City
P.R. China

Product Designation Mobile Phone, Model RG220, SWIFT PLUS, Trade Name: RugGear

Product Description GSM Mobile Phone with WCDMA, WiFi, Bluetooth and GPS function

Manufacturer Power Idea Technology (Shenzhen) Co., Ltd.
1401A, Building 8, Bin Hai Zhi Chuang Garden
Huangdong Road and Xihuan North Road
NanShan District, ShenZhen City
P.R. China

Essential Requirement	Applied Specifications / Standards	Documentary Evidence	Result
Art. 3.1(a) Health	EN 50360, EN 62209-1/-2 EN 62479, EN 62311	Test Report STR13058020H Test Report STR13058020E-7	conform
Art. 3.1(a) Safety	EN 60950-1+A11+A1+A12 EN 50332-1	Test Report STR13058020S Test Report STR13058020S-2 Test Report STR13058020S-1	conform
Art. 3.1(b) EMC	EN 301 489-1/-3/-7/-17/-24	Test Report STR13058020E-5	conform (see note 1)
Art. 3.2 Radio	EN 301 511, EN 301 908-1/-2 EN 300 328, EN 300 440-1/-2	Test Report STR13058020E-1 Test Report STR13058020E-2 Test Report STR13058020E-3 Test Report STR13058020E-4 Test Report STR13058020E-6	conform

Note: The Power Adapter using USB Micro-B connector was not assessed according to EN 301 489-34.

The product shall be marked with the CE conformity marking and our Notified Body number as shown on the right.

CE 0678

The scope of evaluation relates to the submitted documents only.

This Statement of Opinion is issued in accordance with Annex IV of the R&TTE Directive 1999/5/EC of 9th March, 1999 and is only valid in conjunction with the attached Annex.

Unterleinleiter,
2013-06-20


Klaus Knörring
Notified Body



CONTACT / SERVICE CENTER

RugGear Europe GmbH
Service Center

c/o AdivoTEC GmbH
Averdiekstraße 28
49078 Osnabrück
Germany

service@ruggear-europe.com

Fon **+49 (0)541 150464-15**

Fax **+49 (0)541 150464-14**

Available: Monday – Friday, 08:00 am – 05:00 pm
(not during public holidays)

READ THE USER
MANUAL ONLINE



WWW.RUGGEAR-EUROPE.COM/EN/SUPPORT

RugGear Europe GmbH | info@ruggear-europe.com
i_Park Tauberfranken 14 | 97922 Lauda-Koenigshofen | Germany



INHALT

SICHERHEITSHINWEISE

1_Einführung.....	31
2_Fehler und unzulässige Belastungen.....	32
3_Weitere Sicherheitshinweise.....	33

SCHNELLSTART

4_Tastenbelegung.....	35
5_Erste Schritte.....	36
5.1_Akku.....	36
5.1.1_Ein- und Ausbau des Akkus.....	36
5.1.2_Laden des Akkus.....	37
5.1.3_Gebrauch des Akkus.....	37
5.2_Installation der SIM Karten.....	38
5.3_Installation der Micro-SD Karte.....	38

ERSTER EINSATZ

6_Erster Einsatz.....	40
6.1_Anschalten des Telefons.....	40
6.2_Ausschalten des Telefons.....	41
6.3_Sperren und Entsperren des Telefons.....	41
6.4_Benutzung des Touchscreen.....	42
6.5_Verbinden des Telefons mit einem Computer.....	43

BILDSCHIRMLAYOUT

7_Bildschirmlayout.....	43
7.1_Statusleiste.....	44
7.1.1_Benachrichtigungsfeld.....	45
7.2_Schnellzugriffsleiste.....	46
7.3_Home Screen.....	46
7.3.1_Hinzufügen neuer Elemente zum Home Screen.....	46
7.3.2_Verschieben eines Elementes.....	47
7.3.3_Entfernen eines Elementes.....	47
7.3.4_Erstellen eines Ordners.....	47
7.3.5_Umbenennen eines Ordners.....	47
7.3.6_Wechseln des Hintergrundbildes.....	48

INFORMATIONEN

8_Spezifikationen.....	48
9_Fehlerbehebung.....	49
10_Wartungshinweis.....	51
11_SAR.....	51
11_Richtlinien R&TTE.....	53
Service Center.....	54

VORBEHALT

Technische Änderungen behalten wir uns vor.
Änderungen, Irrtümer und Druckfehler begründen
keinen Anspruch auf Schadensersatz.

Alle Rechte vorbehalten.

Für Datenverluste oder andere Schäden gleich
welcher Art, die durch den unsachgemäßen
Gebrauch des Telefons entstanden sind, übernimmt
die RugGear Europe GmbH keine Haftung.

Dieses Dokument enthält die notwendigen
Sicherheitshinweise für die sichere Verwendung
des Smartphones **RG500**.

Detailliertere Informationen erhalten Sie unter
www.ruggear-europe.com oder direkt direkt bei
unserem Service Center.

(C) 2014 RUGGEAR EUROPE GMBH

1_EINFÜHRUNG

DE

Dieses Dokument enthält Informationen und Sicherheitsvorschriften, die für einen sicheren Betrieb des Smartphones **RG500** unter den beschriebenen Bedingungen unbedingt zu berücksichtigen sind.

Die gültige EG-Konformitätserklärung, Sicherheitshinweise und Bedienungsanleitung können unter **www.ruggear-europe.com** heruntergeladen oder bei der RugGear Europe GmbH angefordert werden.

HINWEIS

Dieses Dokument enthält nur die für die Inbetriebnahme und die sichere Verwendung des Telefons nötigen Schritte. Eine komplette Schnellstartanleitung finden Sie auf **www.ruggear-europe.com**.

Um den IP-Schutz des Telefons sicherzustellen, achten Sie bitte darauf, dass die Akkuabdeckung, die Verschlüsse für den Headset- und USB-Anschluss und die Abdeckung der Gehäuseschrauben sicher und fest installiert sind.

Bitte beachten Sie Seite 41, um zu erfahren wie sich das Telefon mit einem Computer verbinden lässt.

2_FEHLER UND UNZULÄSSIGE BELASTUNGEN

Sobald zu befürchten ist, dass die Sicherheit des Gerätes beeinträchtigt wurde, muss das Gerät außer Betrieb genommen werden.

Die unbeabsichtigte Wiederinbetriebnahme muss verhindert werden.

Die Gerätesicherheit kann gefährdet sein, wenn z.B.:

- ✦ Fehlfunktionen auftreten.
- ✦ am Gehäuse des Telefons oder des Akkus Beschädigungen erkennbar sind.
- ✦ das Telefon übermäßigen Belastungen ausgesetzt wurde.
- ✦ das Telefon unsachgemäß gelagert wurde.

3 WEITERE SICHERHEITSHINWEISE

DE

- ✦ Berühren Sie das Display nicht mit scharfkantigen Gegenständen. Staub und Schmutz können ebenso die Displayscheibe zerkratzen. Bitte halten Sie die Displayscheibe sauber, indem Sie diese regelmäßig mit einem weichen Stofftuch reinigen.
- ✦ Laden Sie das Telefon nur in trockenen Innenräumen.
- ✦ Setzen Sie das Telefon keinen hohen Temperaturen aus, da dadurch der Akku überhitzen kann, was zu Feuer oder im schlimmsten Fall zu einer Explosion führen kann.
- ✦ Laden Sie das Telefon nicht in der Nähe von brennbaren oder explosiven Substanzen.
- ✦ Laden Sie das Telefon nicht in feuchter, staubiger oder zu warmer bzw. zu kalter Umgebung. (Der zulässige Temperaturbereich für das Laden des Telefons beträgt 0 °C – 45 °C).
- ✦ Benutzen Sie das Telefon nicht an Orten, an denen das Benutzen von Mobiltelefonen verboten ist.
- ✦ Setzen Sie das Gerät, den Akku oder das Ladegerät keinen starken elektrischen Magnetfeldern aus, wie sie z.B. von Induktionsherden oder Mikrowellenöfen ausgehen.
- ✦ Öffnen Sie das Telefon nicht selbst und führen Sie auch keine Reparaturen selbst durch. Unsachgemäße Reparaturen können zur Zerstörung des Gerätes, zu Feuer oder zu einer Explosion führen. Das Gerät darf nur von autorisierten Fachleuten repariert werden.
- ✦ Verwenden Sie nur von RugGear Europe GmbH zugelassenes Zubehör.
- ✦ Achten Sie unbedingt darauf, dass Sie die Pole des Akkus nicht direkt mit einem leitfähigen Material verbinden. Damit verhindern Sie einen Kurzschluss des Akkus.

- ✦ Schalten Sie das Telefon in Kliniken oder anderen medizinischen Einrichtungen aus. Dieses Telefon kann die Funktion von medizinischen Geräten wie Herzschrittmachern oder Hörhilfen beeinflussen. Halten Sie daher immer einen Sicherheitsabstand von mindestens 15 cm zwischen Telefon und dem Herzschrittmacher.
- ✦ Achten Sie bei der Verwendung des Telefons während der Steuerung eines Kraftfahrzeuges auf die entsprechenden Landesgesetze.
- ✦ Schalten Sie das Telefon aus und entfernen Sie das Ladegerät, bevor Sie das Telefon reinigen.
- ✦ Benutzen Sie keine chemischen Mittel zum Reinigen des Telefons oder des Ladegerätes. Reinigen Sie die Geräte mit einem weichen, angefeuchteten antistatischen Stofftuch.
- ✦ Akkus gehören NICHT in den Hausmüll. Als Verbraucher sind Sie dazu verpflichtet alte Akkus zur fachgerechten Entsorgung zurückzugeben.
- ✦ Für Schäden durch Computerviren, die beim Gebrauch der Internetfunktionen heruntergeladen werden, ist der Benutzer selbst verantwortlich. Ein Regressanspruch gegenüber der RugGear Europe GmbH besteht nicht.

WARNUNG

Die RugGear Europe GmbH übernimmt keine Haftung für Schäden, die durch Nichtbeachtung dieser Hinweise oder unsachgemäßen Gebrauch des Telefons entstehen.

4_TASTENBELEGUNG

DE



1 **An/Aus:**

Aktivieren der Bildschirmsperre.
Langer Druck zum An-, bzw.
Ausschalten.

2 **Menü:**

Kontextspezifische Optionen.

3 **Home:**

Zurück zum Home Screen. Langer
Druck zeigt zuletzt verwendete Apps.

4 **Zurück:**

Rückkehr zum vorherigen Bildschirm.

5 **Lautstärke:**

Kontextsensitive Lautstärken-
regelung.

6 **SOS:**

Vorbereitete Taste zur Nutzung
einer SOS-Funktion, zusätzliche
kostenpflichtige Applikation
notwendig.

7 **PTT:**

Vorbereitete Taste zur Nutzung
einer Push-to-Talk Lösung, zusätz-
liche kostenpflichtige Applikation
notwendig.

NOTE

Unsere Empfehlungen für
Push-to-Talk und SOS Appli-
kationen finden Sie unter:
www.ruggear-europe.com

5.1.2_LADEN DES AKKUS

- Verbinden Sie das im Lieferumfang enthaltene USB-Kabel mit dem Telefon wie im Bild dargestellt.
- Kontaktieren Sie anschließend das Kabel mit dem Netzteil.
- Nach dem Ladevorgang trennen Sie bitte das USB Kabel vom Netzteil.



DE

5.1.3_GEBRAUCH DES AKKUS

Im täglichen Gebrauch des Telefons hängt die Standby- und die Redezeit von der Qualität der Verbindung zum Netzwerk, den Gebrauchsgewohnheiten und den Umgebungsbedingungen ab.

Sobald der Akku einen niedrigen Ladezustand erreicht, wird er das Gerät darauf hinweisen die Ladung in Gang zu setzten. Falls dies nicht umgehend erfolgt, können nichtgespeicherte Daten verloren gehen.


Wenn das Telefon für längere Zeit nicht geladen wird, schaltet es sich selbst ab.

WARNUNG

Der Akku des Telefons darf nur innerhalb des Temperaturbereiches von 0 °C bis 45 °C geladen werden! Bitte laden Sie niemals außerhalb dieses Temperaturbereiches und nutzen Sie das beiliegende USB-Kabel.

5.2_INSTALLATION DER SIM KARTEN

Das Telefon verfügt über Steckplätze für zwei SIM Karten (1, 2). Sobald zwei SIM Karten installiert sind, können Sie die favorisierte Karte wählen. Dies erfolgt in den Einstellungen unter dem Menüpunkt *Einstellungen* ➔ *SIM Verwaltung*.

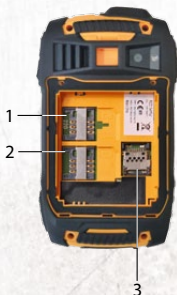

5.3_INSTALLATION DER MICRO-SD KARTE

Öffnen Sie den SD Kartenhalter, legen Sie die Micro-SD Karte ein (3) und schließen dann den Kartenhalter.

WARNUNG

Bauen Sie keine SIM Karte ein oder entfernen Sie eine, wenn ein Ladegerät angeschlossen ist. Ansonsten können die SIM Karten, bzw. das Telefon beschädigt werden.

6_ERSTER EINSATZ

6.1_ ANSCHALTEN DES TELEFONS

Drücken Sie die *An/Aus Taste* bis der Bildschirm hell wird.


Abhängig von den Sicherheitseinstellungen Ihrer SIM Karte werden sie nach deren PIN gefragt.

Beim ersten Einschalten werden Sie nach Ihrer bevorzugten Sprache, der Zeit, dem Datum und persönlichen Informationen gefragt.

Sie werden ebenfalls aufgefordert, sich in Ihrem Google™-Konto einzuloggen oder ein neues Konto anzulegen. Sie können dies auch später tun, aber beachten Sie bitte, dass Funktionen des Telefons wie der Google Play™ Store von einem aktivierten Google™-Konto abhängen.

6.2_AUSSCHALTEN DES TELEFONS

1. Halten Sie die *An/Aus Taste* gedrückt bis das Ausschaltmenü erscheint.



2. Tippen Sie auf *Ausschalten*.
3. Tippen Sie auf *OK*.

6.3_SPERREN UND ENTSPERREN DES TELEFONS

- Drücken Sie die *An/Aus Taste*, um das Telefon zu sperren. Bei gesperrtem Bildschirm können Sie weiterhin Nachrichten und Anrufe empfangen.

Bei längerer Nichtbenutzung wird das Telefon automatisch gesperrt.

- Um das Telefon zu entsperren, drücken Sie die *An/Aus Taste*. Nachdem sich der Bildschirm eingeschaltet hat, ziehen Sie das Schloss-Icon nach rechts, um das Telefon zu entsperren.

Abhängig von den Sicherheitseinstellungen wird das Telefon nach einer PIN zum Entsperren fragen. Dies ist NICHT die PIN Ihrer SIM Karte sondern ein separater Code, den Sie unter *Systemeinstellungen* → *Sicherheit* → *Bildschirmsperre* einstellen können.

6.4_BENUTZUNG DES TOUCHSCREEN

Dieses Telefon beinhaltet einen kapazitiven Touchscreen. Zur Bedienung reicht eine leichte Berührung, starker Druck ist nicht nötig.

Die folgenden Aktionen können verwendet werden:

Tippen

Um eine Anwendung (App) zu öffnen oder um die Bildschirmtastatur zu nutzen, tippen Sie mit einem Finger auf den Bildschirm.

Tippen und halten

Tippen Sie länger als zwei Sekunden auf ein Element, um eine Pop-up-Liste mit Optionen zu öffnen.

Ziehen

Tippen Sie auf ein Element und ziehen Sie es mit dem Finger zum gewünschten Platz.

Zweimal Tippen

Tippen Sie zweimal schnell mit Ihrem Finger, um angezeigte Fotos oder Webseiten zu vergrößern oder zu verkleinern.

Wischen

Berühren Sie den Bildschirm und wischen Sie rechts oder links, um weitere Seiten anzuzeigen. Wischen Sie nach oben oder unten, um in Listen zu scrollen.

Finger auseinander- und zusammenbewegen

Berühren Sie den Bildschirm mit zwei Fingern dicht zusammen. Ziehen Sie die Finger auseinander, um den Bereich auf einer Webseiten, einer Karte oder einem Bild zu vergrößern. Führen Sie die Finger zusammen, um einen Bereich zu verkleinern.

6.5 VERBINDEN DES TELEFONS MIT EINEM COMPUTER

DE

Auf die Micro-SD Karte des Telefons kann von jedem Computer aus über das USB Kabel zugegriffen werden.


1. Verbinden Sie das Telefon über das USB Kabel mit einem Computer. Wird diese Verbindung das erste Mal hergestellt, installiert der Computer die benötigten Treiber automatisch.
2. Tippen Sie auf *USB-Speicher aktivieren* in der Dialogbox auf dem Telefon und tippen Sie auf *OK* zur Bestätigung.

HINWEIS

Während von einem Computer auf die Micro-SD Karte zugegriffen wird sind eventuell nicht alle Funktionen des Telefons verfügbar.

7_BILDSCHIRMLAYOUT

Nach der Anmeldung oder dem Anschalten des Telefons öffnet sich standardmäßig der Home Screen:

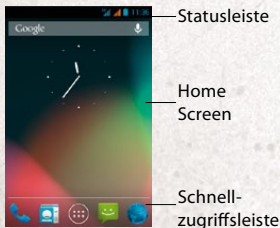

Der Home Screen ist der Ausgangspunkt zur Bedienung des Telefons. Hier können App Icons, Verknüpfungen und andere Features angezeigt werden. Der Home Screen lässt sich so anpassen, dass er die Icons, die Sie benötigen, anzeigt.

7.1 STATUSLEISTE

Die Statusleiste erscheint immer am oberen Bildschirmrand.

Rechts werden Gerätestatusicons wie der Akkustatus, GPS, Daten- oder Mobilfunkverbindungen angezeigt.

Die linke Seite zeigt Nachrichten, wie z.B. verpasste Anrufe oder erhaltene Nachrichten.

STATUSICONS



Signalstärke und -typ von SIM1 oder SIM2
(E für Edge, 3G für UMTS, H für HSDPA)



WLAN Verbindungsstatus und -stärke



Bluetooth® Verbindungsstatus



Flugzeugmodus
(alle drahtlosen Verbindungen sind deaktiviert)



Akkustatus



GPS empfängt Daten



Vibrationsalarm aktiv



Stummschaltung
(kein Klingelton, kein Vibrationsalarm)

BENACHRICHTIGUNGSICONS



Verpasste Anrufe



Eine oder mehrere neue E-Mails



Eine oder mehrere neue Nachrichten




Wecker aktiviert



USB Verbindung hergestellt

7.1.1_BENACHRICHTIGUNGSFELD

Ziehen Sie die Statusleiste nach unten, um das Benachrichtigungsfeld anzuzeigen:

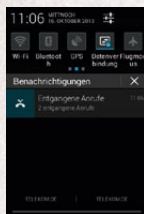

Ihr Telefon informiert Sie hier über neu erhaltene Nachrichten oder anstehende Termine. Im Benachrichtigungsfeld finden Sie außerdem Informationen über Alarmer, Einstellungen und andere relevante Informationen.

Tippen Sie auf eine Benachrichtigung, um eine relevante Anwendung zu öffnen.

Um Benachrichtigungen zu entfernen, wischen Sie sie nach links oder rechts.



Benutzen Sie das *Einstellungs-Icon* in der oberen rechten Ecke des Benachrichtigungsfeldes, um Zugriff auf die Systemeinstellungen zu erhalten.

Um das Einstellungsfeld zu schließen, ziehen Sie es vom unteren Bildschirmrand nach oben.

7.2_SCHNELLZUGRIFFSLEISTE

Verknüpfungen, die hier platziert sind, sind auf jeder Seite des Home Screens sichtbar.



Tippen Sie auf das *App Icon*, um den Anwendungsordner mit Ihren installierten Anwendungen zu öffnen. Von hier aus können sie jede App mit einem Tip auf ihr Icon starten.

7.3_HOME SCREEN

Hier können Verknüpfungen zu Apps und Widgets platziert werden.

Widgets sind kleine Anwendungen, die Funktionen und Informationen auf dem Home Screen darstellen, wie z.B. das lokale Wetter, Börseninformationen oder eine Vorschau Ihrer Emails. Widgets finden Sie im Anwendungsordner.

HINWEIS

Einige Widgets nehmen Verbindung zu Internet-Diensten auf. Diese Dienste können kostenpflichtig sein.

7.3.1_HINZUFÜGEN NEUER ELEMENTE ZUM HOME SCREEN

1. Tippen Sie auf das *App Icon*, um den Anwendungsordner zu öffnen.
2. Suchen Sie nach der gewünschten App oder dem Widget. Wischen Sie mit dem Finger nach rechts oder links, um eine Seite vor- oder zurückzublättern.
3. Tippen und halten Sie das Icon des gewünschten Elementes und warten Sie, bis der Bildschirm zum Home Screen wechselt.
4. Ziehen Sie das Element zum gewünschten Platz und heben Sie Ihren Finger. Um zu einer andern Seite des Home Screens zu wechseln, bewegen Sie das Element zum linken oder rechten Bildschirmrand.

7.3.2_VERSCHIEBEN EINES ELEMENTES

DE

1. Tippen und halten Sie ein Element auf dem Home Screen bis sich das Icon vergrößert.
2. Ziehen sie das Element zur gewünschten Position auf dem Bildschirm, ohne den Finger zu heben.

HINWEIS

Auf dem Home Screen muss genügend Platz vorhanden sein, um das Element zu platzieren.

7.3.3_ENTFERNEN EINES ELEMENTES

1. Tippen und halten Sie ein Element auf dem Home Screen bis sich das Icon vergrößert.
2. Ziehen Sie das Element zum oberen Bildschirmrand zum *Entfernen*.

7.3.4_ERSTELLEN EINES ORDNERES

Ziehen Sie ein App Icon auf ein anderes App Icon und lassen Sie es los. Es wird ein Ordner generiert, der beide Icons enthält. Weitere Icons können hinzugefügt werden.

7.3.5_UMBENENNEN EINES ORDNERES

1. Tippen Sie auf einen Ordner, um ihn zu öffnen.
2. Tippen Sie auf den Namen des Ordners.
3. Geben Sie den neuen Namen ein.
4. Tippen Sie *Fertig* oder drücken Sie die *Zurück Taste*.

7.3.6 WECHSELN DES HINTERGRUNDBILDES

Tippen und halten Sie eine freie Stelle auf dem Home Screen, um Optionen für das Hintergrundbild zu öffnen.

8_SPEZIFIKATIONEN

■ Frequenzen

Quadband
GSM/GPRS/EDGE
850/900/1800/1900 MHz
WCDMA/HSPA
900/2100 MHz

■ Abmessungen

Gewicht: 206 g,
Maße: 124 x 68,5 x 24 mm

■ Bildschirm

3,2" (8,13 cm) RugDisplay-
Glas, robustes TFT-Touch-
screen mit einer Auflösung
von 320 x 480 Pixeln

■ Kameras

5 MP (Rückseite)
0,3 MP (Front)

■ Lautsprecher

Verstärkte 3 Watt, mit einer
Leistung von 100 dB

■ Drahtlose Kommunikation

Bluetooth®, Wi-Fi®, GPS, NFC

■ Akku

Akku mit 2060 mAh, 300 Std.
Stand-by, Gesprächszeit
2G/3G: 468 Min./210 Min.

■ Speicher

4 GB ROM, 512 MB RAM
Speicher, Micro-SD Speicher
erweiterbar auf 32 GB

■ Prozessor

MT6572 (Dual Core 1.2 GHz)

■ Temperatur

In einer Umgebung von
-20 °C bis 60 °C

■ IP68

Wasserdicht: 30 Min. bis
zu 2 m Tiefe, staubdicht,
geschützt vor Mikropartikeln

■ MIL-STD-810G

Aufprallschutz: über-
steht Fall aus 2 m Höhe,
staubdicht, geschützt vor
Mikropartikeln

9_FEHLERBEHEBUNG

DE

Wenn Sie Probleme mit Ihrem Telefon haben, probieren Sie die nachfolgenden Anweisungen zur Problembehebung. Können Sie damit das Problem nicht beheben, wenden Sie sich an Ihren Fachhändler oder das RugGear Europe Service Center.

DAS TELEFON LÄSST SICH NICHT EINSCHALTEN

- ✦ **Die Akkuladung ist zu niedrig.**
Bitte laden Sie den Akku.
- ✦ **Die Einschalttaste wurde nicht lang genug gedrückt.**
Drücken Sie die Einschalttaste länger als 3 Sekunden.
- ✦ **Der Akku hat eine schlechte Verbindung zum Gerät.**
Entfernen Sie den Akku und reinigen Sie vorsichtig die Kontakte.
- ✦ **Es liegt ein Fehler mit einer SIM Karte vor.**
Prüfen und ersetzen Sie die SIM Karte.

UNZUREICHENDE STAND-BY ZEIT

- ✦ **Die Leistung des Akkus wird altersbedingt schwach.**
Bitte wenden Sie sich an Ihren Fachhändler oder das RugGear Europe Service Center direkt und ersetzen Sie den Akku.
- ✦ **Zu viele Programme und Funktionen laufen gleichzeitig.**
Beenden Sie Programme und Funktionen, wenn Sie diese nicht mehr brauchen.

KEINE LADUNG MÖGLICH

❖ **Schlechte Kontakte.**

Prüfen Sie alle Kontakte und Stecker.

❖ **Die Eingangsspannung ist zu schwach.**

Laden Sie das Telefon für eine Stunde, nehmen Sie das Ladegerät vom Netz, warten Sie eine Minute und setzen Sie dann die Ladung fort. In dieser Zeit kann es vorkommen, dass sich das Telefon aufgrund der niedrigen Spannungslage nicht einschalten lässt.

❖ **Der Akku hat einen Fehler.**

Ersetzen Sie den Akku.

GESPRÄCHSABBRÜCHE TRETEN AUF

❖ **Es liegt ein Fehler mit einer SIM Karte vor.**

Prüfen und ersetzen Sie die SIM Karte.

❖ **Es treten Netzwerkfehler auf.**

Bitte wechseln Sie zu einem Netzwerk mit einem stärkeren Signal.

ANDERE PERSONEN ERHALTEN MEINE ANRUF

❖ **Das Telefon ist auf eine andere Telefonnummer umgestellt.**

Bitte prüfen und ändern Sie die Einstellung der Rufumleitung.

DAS TELEFON SCHALTET SICH AUTOMATISCH AB

❖ **Die Akkuladung ist zu niedrig.**

Bitte laden Sie den Akku.

❖ **Es ist eine Störung aufgetreten.**

Starten Sie das Telefon erneut. Ist das Problem damit nicht behoben, wenden Sie sich an Ihren Fachhändler oder die RugGear Europe GmbH.

10_WARTUNGSHINWEIS

DE

Bedarf Ihr Telefon einer Reparatur oder sollten Sie ein Problem mit Ihrem Telefon haben, wenden Sie sich bitte an das Service Center oder Ihren Verkäufer.

MARKEN

- ✦ RugGear (Europe) und das RugGear (Europe) Logo sind eingetragene Marken der RugGear Europe GmbH.
- ✦ Das Android-Logo, Google™ und Google Play™ Store sind Marken von Google, Inc.
- ✦ Der Android Roboter wird anhand von Werken reproduziert bzw. verändert, die von Google™ erstellt oder geteilt wurden. Seine Verwendung erfolgt gemäß den Bestimmungen der Creative Commons 3.0 Lizenz (Namensnennung).
- ✦ Bluetooth® ist eine weltweit eingetragene Marke der Bluetooth SIG, Inc.
- ✦ Wi-Fi® ist eine eingetragene Marke der Wi-Fi Alliance.
- ✦ Alle weiteren Marken und Copyrights sind Eigentum ihrer jeweiligen Besitzer.

WIEDERVERWERTUNG

Das Symbol der durchgestrichenen Abfalltonne auf Rädern, das auf dem Produkt, auf dem Akku, in der Dokumentation oder auf dem Verpackungsmaterial zu finden ist, bedeutet, dass elektrische und elektronische Produkte und Akkus am Ende ihrer Lebensdauer einer getrennten Müllsammlung zugeführt werden müssen. Diese Vorschriften gelten in der Europäischen Union.

Entsorgen Sie diese Produkte nicht über den unsortierten Hausmüll. Entsorgen Sie gebrauchte elektronische Produkte, Akkus und Verpackungsmaterial stets bei den entsprechenden Sammelstellen. Sie beugen so der unkontrollierten Müllbeseitigung vor und fördern die Wiederverwertung von stofflichen Ressourcen.

Weitere Informationen erhalten Sie über den Händler, bei dem Sie das Produkt erworben haben, von regionalen Abfallunternehmen, staatlichen Behörden für die Einhaltung der erweiterten Herstellerhaftung oder dem für Ihr Land oder Ihre Region zuständigen RugGear Europe GmbH Vertreter.

Der Inhalt dieses Dokuments wird so präsentiert, wie er aktuell vorliegt. Die RugGear Europe GmbH übernimmt weder ausdrücklich noch stillschweigend irgendeine Gewährleistung für die Richtigkeit oder Vollständigkeit des Inhalts dieses Dokuments, einschließlich, aber nicht beschränkt, auf die stillschweigende Garantie der Markttauglichkeit und der Eignung für einen bestimmten Zweck, es sei denn, anwendbare Gesetze oder Rechtsprechungen schreiben zwingend eine Haftung vor. Die RugGear Europe GmbH behält sich das Recht vor, jederzeit ohne vorherige Ankündigung Änderungen an diesem Dokument vorzunehmen oder das Dokument zurückzuziehen.

11 INFORMATIONEN ZUR SAR ZERTIFIZIERUNG (SPEZIFISCHE ABSORBATIONSRATE)

DE

Dieses Gerät erfüllt internationale Richtlinien für die Belastung durch Radiowellen.

Dieses Gerät ist ein Funksender und -empfänger. Die Konstruktion des Gerätes gewährleistet, dass die durch internationale Richtlinien empfohlenen Grenzwerte für die Belastung durch Radiowellen (elektromagnetische Funkfrequenzfelder) nicht überschritten werden. Diese Richtlinien wurden von der unabhängigen wissenschaftlichen Organisation ICNIRP erarbeitet und enthalten eine beträchtliche Sicherheitsspanne, um die Sicherheit aller Personen, ungeachtet ihres Alters und Gesundheitszustandes, zu garantieren.

In den Richtlinien für die Belastung durch Radiowellen wird die Maßeinheit SAR (Specific Absorption Rate – spezifische Absorptionsrate) verwendet. Für mobile Geräte gilt ein SAR-Grenzwert von 2,0W/kg. SAR-Tests werden mit üblichen Nutzungspositionen durchgeführt, wobei das Gerät in allen getesteten Frequenzbändern mit dem höchsten zugelassenen Leistungspegel sendet. Für dieses Gerätemodel wurden gemäß ICNIRP-Richtlinien die folgenden SAR-Höchstwerte ermittelt:

SAR – Höchstwerte für dieses Model und die Bedingungen, unter denen diese Werte ermittelt wurden

- ✦ SAR (Kopf) 0,650 W/kg (GSM1800)
- ✦ SAR (am Körper getragen) 0,807 W/kg (GSM900)

Während der Nutzung des Gerätes liegen die tatsächlichen SAR-Werte in der Regel weit unter den oben aufgeführten Werten. Dies ist dadurch bedingt, dass Ihr Mobilgerät aus Gründen der Systemeffizienz und zur Verminderung von Störungen im Mobilfunknetz automatisch die Betriebsleistung reduziert, wenn für einen Anruf nicht die vollständige Leistung erforderlich ist. Je geringer die Leistungsabgabe des Gerätes ist, desto niedriger ist der SAR-Wert.

Mit diesem Gerät wurde ein SAR-Test durchgeführt, bei dem ein Abstand von 1,5 cm eingehalten wurde. Damit die Anforderungen hinsichtlich der HF-Belastung bei der Verwendung in Körpernähe eingehalten werden, muss sich das Gerät mindestens 1,5 cm vom Körper entfernt befinden.

Organisationen wie die Weltgesundheitsorganisation und die amerikanische Food and Drug Administration schlagen vor, zum Verringern der Strahlenbelastung Freisprecheinrichtungen zu verwenden, wodurch sich das Drahtlosgerät bei der Nutzung in Entfernung zu Kopf und Körper befindet, oder schränken Sie die Verwendung des Gerätes ein.



Notified Body Directive 99/5/EC
Notified Body EMC Directive 2004/108/EC
RFCAB under the Japan-EC MRA
FCB under the Canada-EC MRA
TCB under the USA-EC MRA

EC Identification No. 0678



Bundesnetzagentur

Recognized by the German Regulator
to act as a Notified Body in accordance with the
R&TTE Directive 1999/5/EC of 9. March 1999

BNNetzA-bs-02/51-54

R&TTE STATEMENT OF OPINION

Registration No.	G109691D
Certificate Holder	Power Idea Technology (Shenzhen) Co., Ltd. 1401A, Building 8, Bin Hai Zhi Chuang Garden Huangdong Road and Xihuan North Road NanShan District, ShenZhen City P.R. China
Product Designation	Mobile Phone, Model RG220, SWIFT PLUS, Trade Name: RugGear
Product Description	GSM Mobile Phone with WCDMA, WiFi, Bluetooth and GPS function
Manufacturer	Power Idea Technology (Shenzhen) Co., Ltd. 1401A, Building 8, Bin Hai Zhi Chuang Garden Huangdong Road and Xihuan North Road NanShan District, ShenZhen City P.R. China

Essential Requirement	Applied Specifications / Standards	Documentary Evidence	Result
Art. 3.1(a) Health	EN 50360, EN 62209-1/-2 EN 62479, EN 62311	Test Report STR13058020H Test Report STR13058020E-7	conform
Art. 3.1(a) Safety	EN 60950-1+A11+A1+A12 EN 50332-1	Test Report STR13058020S Test Report STR13058020S-2 Test Report STR13058020S-1	conform
Art. 3.1(b) EMC	EN 301 489-1/-3/-7/-17/-24	Test Report STR13058020E-5	conform (see note 1)
Art. 3.2 Radio	EN 301 511, EN 301 908-1/-2 EN 300 328, EN 300 440-1/-2	Test Report STR13058020E-1 Test Report STR13058020E-2 Test Report STR13058020E-3 Test Report STR13058020E-4 Test Report STR13058020E-6	conform

Note: The Power Adapter using USB Micro-B connector was not assessed according to EN 301 489-34.

The product shall be marked with the CE conformity marking
and our Notified Body number as shown on the right.

CE 0678

The scope of evaluation relates to the submitted documents only.

This Statement of Opinion is issued in accordance with Annex IV of the R&TTE Directive 1999/5/EC
of 9th March, 1999 and is only valid in conjunction with the attached Annex.

Unterfeinleiter,
2013-06-20

Klaus Knöng
Notified Body





KONTAKT / SERVICE CENTER

**RugGear Europe GmbH
Service Center**

c/o AdivoTEC GmbH
Averdiekstraße 28
49078 Osnabrück

service@ruggear-europe.com

Fon **+49 (0)541 150464-15**

Fax **+49 (0)541 150464-14**

Erreichbar: Montag – Freitag , 08:00 – 17:00 Uhr
(nicht an gesetzlichen Feiertagen)

HIER GEHT'S
ZUM ONLINE HANDBUCH!



WWW.RUGGEAR-EUROPE.COM/SERVICE

RugGear Europe GmbH | info@ruggear-europe.com
i_Park Tauberfranken 14 | 97922 Lauda-Koenigshofen | Germany



WWW.RUGGEAR-EUROPE.DE