



\*LG LED Monitors are LCD Monitors with LED Backlighting.

Please read the safety information carefully before using the product.

IPS LED Monitor (LED Monitor) Model List

43UD79

43UD79T

| <b>WARNING</b> : This product contains chemicals known to the State of California to cause cancer and birth |  |
|---|--|
| defects or other reproductive harm. Wash hands after handling.  |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |

## **CONTENTS**

### 3 LICENSE

| - |           |         |          |       |
|---|-----------|---------|----------|-------|
| Λ | ASSEMBL   | INIC AI | NID DDEC |       |
| - | . Assembl |         | MIJ PRFF | ARHAG |

- 4 Product Components
- 5 Supported Drivers and Software
- 6 Component and Button Description
- 6 How to Use the Joystick Button
- 7 How to Use the Joystick Button
- 8 Input Connector
- 10 Moving and Lifting the Monitor
- 11 Installing the Monitor
- 11 Assembling the stand base
- 12 Assembling the stand base
- 13 Using the cable holder
- 14 Installing onto a table
- 15 Adjusting the angle
- 15 Using the Kensington lock
- 16 Installing the wall mount plate
- 16 Installing to a wall

### 18 REMOTE CONTROL

### **19** USING THE MONITOR

- 19 Connecting to a PC
- 19 HDMI connection
- 19 DisplayPort connection
- 20 USB-C connection
- 20 Connecting to AV Devices
- 20 HDMI connection
- 21 Connecting Peripherals
- 21 USB Cable connection PC
- 22 Connecting to External Devices
- 22 Connecting Headphones

### 23 USER SETTINGS

- 23 Activating the Main Menu
- 23 Main Menu Features
- 24 User Settings
- 24 Menu Settings

### 29 TROUBLESHOOTING

### 31 SPECIFICATIONS

- 31 43UD79
- 32 43UD79T
- 33 Factory Support Mode (Preset Mode, PC)
- 33 HDMI
- 34 DisplayPort / USB-C
- 35 HDMI Timing (Video)
- 35 Power LED

# **36** EXTERNAL CONTROL DEVICE SETUP

- 36 Communication Parameters
- 36 Transmission
- 36 OK Acknowledgement
- 36 Error Acknowledgement
- 37 Command Reference List

## **LICENSE**

Each model has different licenses. Visit www.lq.com for more information on the license.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



VESA, VESA logo, DisplayPort compliance logo and DisplayPort compliance logo for dual-mode source devices are all registered trademarks of the Video Electronics Standards Association.



The SuperSpeed USB Trident logo is a registered trademark of USB Implementers Forum, Inc.

The following content is only applied to the monitor which is sold in Europe market and which needs to meet the ErP Directive:

<sup>\*</sup> This monitor is set to be turned off automatically in 4 hours after you turned on display if there is no adjustment to display.

<sup>\*</sup> To make this setting be disabled, change the option to 'Off' in OSD menu of "Automatic Standby".

## ASSEMBLING AND PREPARING

## **Product Components**

Please check whether all the components are included in the box before using the product. If there are missing components, contact the retail store where you purchased the product. Note that the product and components may look different from those shown here.



CD(Owner's Manual) / Card



**Power Cord** ( Depending on the country )



Remote control, Batteries (AAA)



RS-232C Gender (This gender is not included in all countries.)



**HDMI Cable** (This cable is not included in all countries.)




DisplayPort Cable (This cable is not included in all countries.)




USB C-C cable (This cable is not included in (This gender is not included all countries.)



**USB C-A Gender** in all countries. )

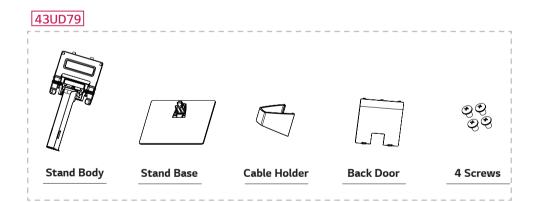

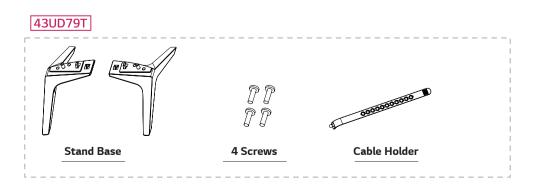



- Always use genuine components to ensure safety and product performance.
- The product warranty will not cover damage or injury caused by the use of counterfeit components.
- It is recommend that use the supplied components.
- If you use generic cables not certified by LG, the screen may not display or there may be image noises.



### NOTE

- Note that the components may look different from those shown here.
- Without prior notice, all information and specifications in this manual are subject to change to improve the performance of the product.
- To purchase optional accessories, visit an electronics store or online shopping site or contact the retail store where you purchased the product.

## **Supported Drivers and Software**


Check the drivers and software supported by your product and refer to the manuals on the CD enclosed in the product package.

| Drivers and Software | Installation Priority | 43UD79,43UD79T |
|----------------------|-----------------------|----------------|
| Monitor Driver       | Recommended           | 0              |
| On Screen Control    | Recommended           | 0              |
| Dual Controller      | Optional              | 0              |

- Required and Recommended: You can download and install the latest version from the enclosed CD or from the LGE website (www.lg.com).
- Optional: You can download and install the latest version from the LGE website (www.lq.com).

## **Component and Button Description**

43UD79

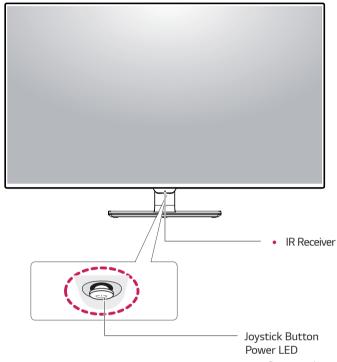

- On: power is on
- Off: power is off

You can easily control the functions of the monitor by pressing the joystick button or moving it left/right with your finger.

### **Basic Functions**


How to Use the Joystick Button

|  | ტ          | Power on          | Press the joystick button once with your finger to turn on the monitor.           |
|--|------------|-------------------|---|
|  |            | Power off         | Press and hold the joystick button once with your finger to turn off the monitor. |
|  | <b>◄/▶</b> | Volume<br>Control | You can control the volume by moving the joystick button left/right.              |



• The joystick button is located at the bottom of the monitor.

### 43UD79T

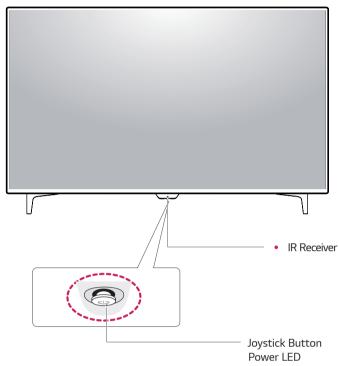

- On: power is on
- Off: power is off

## How to Use the Joystick Button

You can easily control the functions of the monitor by pressing the joystick button or moving it left/right with your finger.

### **Basic Functions**

|  | <b>(b)</b>  | Power on          | Press the joystick button once with your finger to turn on the monitor.           |  |
|--|-------------|-------------------|---|--|
|  |             | Power off         | Press and hold the joystick button once with your finger to turn off the monitor. |  |
|  | <b>⋖</b> /▶ | Volume<br>Control | You can control the volume by moving the joystick button left/right.              |  |




### **NOTE**


• The joystick button is located at the bottom of the monitor.

## **Input Connector**

43UD79

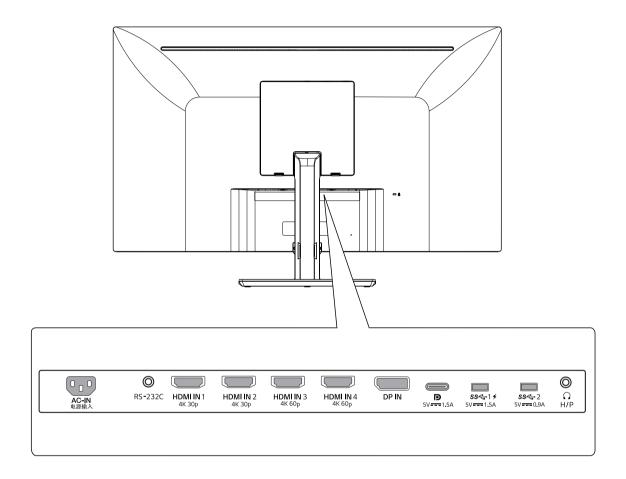

## 43UD79T

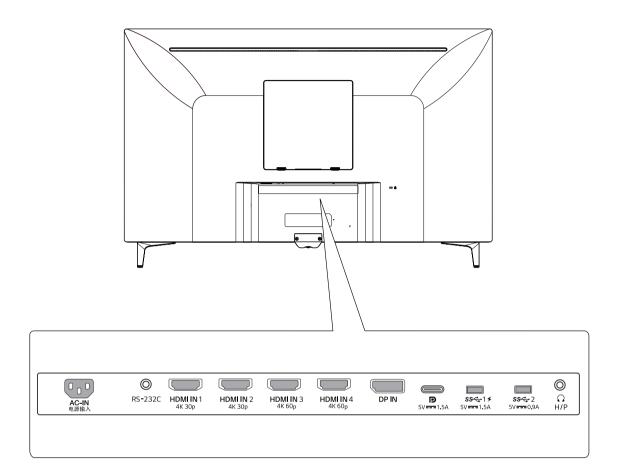

## Moving and Lifting the Monitor

When moving or lifting the monitor, follow these instructions to prevent the monitor from being scratched or damaged and to ensure safe transportation regardless of its shape or size.

- It is advisable to place the monitor in the original box or packing material before attempting to
- Before moving or lifting the monitor, disconnect the power cord and all cables.
- Hold the top and bottom of the monitor frame firmly. Do not hold the screen itself.




When holding the monitor, the screen should face away from you to prevent it being scratched.




- When moving the monitor, avoid any strong shock or vibrations to the product.
- When moving the monitor, keep it upright, never turn the monitor on its side or tilt it sideways.



• As far as possible, avoid touching the monitor screen. This may result in damage to the screen or some of the pixels used to create images.

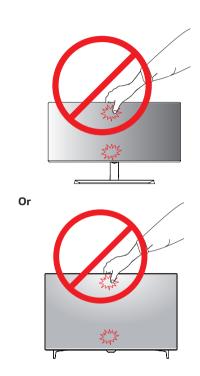

• If you use the monitor panel without the stand base, its joystick button may cause the monitor to become unstable and fall, resulting in damage to the monitor or human injury. In addition, this may cause the joystick button to malfunction.

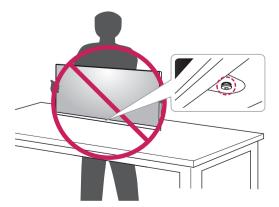

## **Installing the Monitor**

## Assembling the stand base

### 43UD79

1 Please put a soft cloth on a low table or box to protect the screen of the monitor.




2 Please put the monitor on the soft cloth with the screen facing down.




- 3 1 Assemble the Head and Stand body.
  - 2 Assemble the Stand body and Stand base .

Turn the screw clockwise to secure the **stand base**.

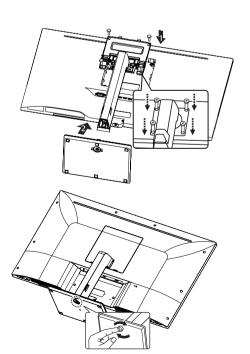

4 Assemble the **Head** and **Back door**.

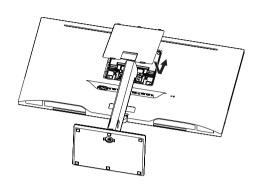



### CAUTION

- To avoid injury to the fingers and foot when Assembly Stand Body and Base, should hold Base when assem-bly stand body and base.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product.

(Doing so may damage the product.)



## Assembling the stand base

### 43UD79T


1 Please put a soft cloth on a low table or box to protect the screen of the monitor.



2 Please put the monitor on the soft cloth with the screen facing down.



3 Assemble the Stand base and Head. Turn the screw clockwise to secure the stand base.

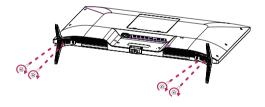



## **CAUTION**

- To avoid injury to the fingers and foot when Assembly **Stand Body** and **Base**, should hold Base when assem-bly stand body and base.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product.

(Doing so may damage the product.)





### CAUTION

- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- Do not carry the monitor upside down by just holding the stand base. This may cause the monitor to fall off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen may cause damage to it.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.




#### VIOTE

 You can disassemble the stand in the reverse order of the assembly.


## Using the cable holder

Arrange the cables using the cable holder as shown in the illustration.

### 43UD79

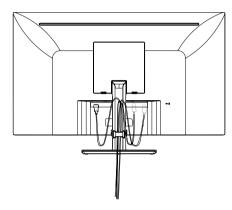

### 43UD79T

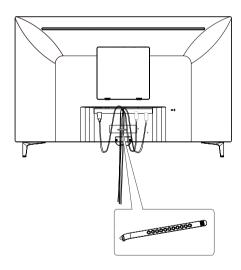



Cable Holder

## Installing onto a table


1 Lift the monitor and place it on the table in an upright position.

Place at least **3.94 inches** away from the wall to ensure sufficient ventilation.

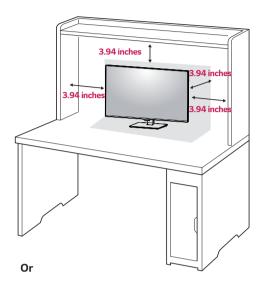

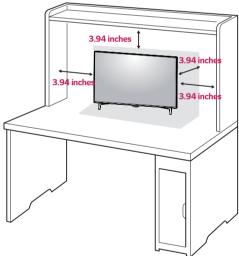

2 Connect the Power cord to the monitor, then plug the power cord into the wall outlet.

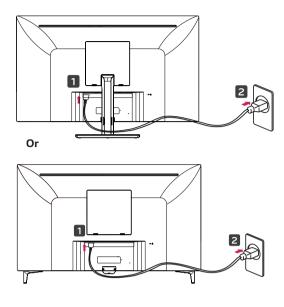


3 Press the joystick button on the bottom of the monitor to turn on the monitor.



Unplug the power cord prior to moving or installing the monitor. There is risk of electric shock.

## **Cautions When Connecting Power Cord**

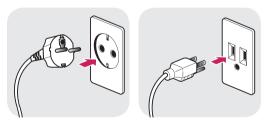


100-240 V ~

- Make sure to use the power cord that is provided in the product package and connect it to a grounded power outlet.
- If you need another power cord, please contact your local dealer or the nearest retail store.

## Adjusting the angle

- Place the monitor in an upright position, mounted on the stand base.
- 2 Adjust the angle of the screen. The angle of the screen can be adjusted forwards or backwards for a comfortable viewing experience.

### 43UD79

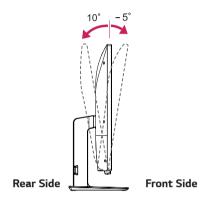



### **WARNING**

 To avoid injury to the fingers when adjusting the screen, do not hold the lower part of the monitor's frame as illustrated below.


### 43UD79








• Be careful not to touch or press the screen area when adjusting the angle of the monitor.

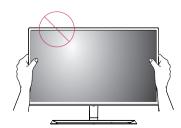

Or

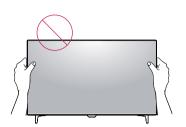



## Using the Kensington lock

The Kensington security system connector is located at the back of the Monitor set.

For more information on installation and usage, refer to the Kensington lock user manual or visit the website at http://www.kensington.com.

Connect the Kensington security system cable between the Monitor set and a table.

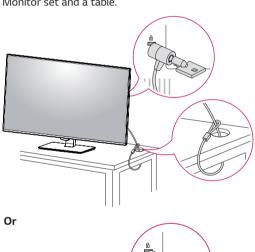

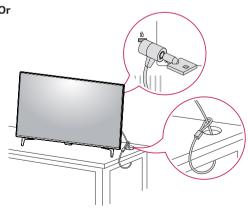



#### NOTE

Use of the Kensington lock is optional.
 The accessories can be purchased at your local electronics store.

### Installing the wall mount plate

This monitor supports the specification of the standard wall mount plate or compatible device.


- 1 Place the screen face down. To protect the screen from scratches, cover the surface with a soft cloth.
- 2 Place the wall mount plate onto the monitor and align it with the screw holes.
- 3 Tighten the four screws to fix the plate to the monitor using a screwdriver.



- The wall mount plate is sold separately.
- For more information on installation, refer to the wall mount plate's installation quide.
- Be careful not to use excessive force when mounting the wall mount plate, as this can damage the monitor's screen.

### Installing to a wall

Install the monitor at least 3.94 inches away from the wall and leave about 3.94 inches of space at each side of the monitor to ensure sufficient ventilation. Detailed installation instructions can be obtained from your local retail store. Please refer to the manual to install and set up a tilting wall mounting bracket.

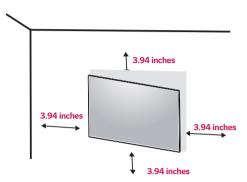


To install the monitor to a wall, attach a wall mounting bracket (optional) to the back of the monitor.

Make sure that the wall mounting bracket is securely fixed to the monitor and to the wall.

- 1 If you use screw longer than standard, the monitor might be damaged internally.
- 2 If you use improper screw, the product might be damaged and drop from mounted position.
  In this case, LG Electronics is not responsible for it.

| Wall Mount (A x B)             | 200 x 200 |
|--------------------------------|-----------|
| Standard screw                 | M6        |
| Number of screws               | 4         |
| Wall Mount Plate<br>(Optional) | LSW240B   |

Wall Mount (A x B)

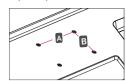



### **CAUTION**

- Unplug the power cord before moving or installing the monitor to avoid electric shocks.
- Installing the monitor on the ceiling or on a slanted wall may result in the monitor falling off, which could lead to injury. Please use the genuine LG wall mounting bracket. For more information, contact your local retail store or a qualified installer.
- Applying excessive force when fastening screws may cause damage to the monitor. Damage caused in this way will not be covered by the product warranty.
- Use the wall mounting bracket and screws that conform to the VESA standard. Damage caused by the use or misuse of inappropriate components will not be covered by the product warranty.



### NOTE

- Use the screws specified by the VESA standard.
- The wall mount kit includes the installation guide and all necessary parts.
- The wall mounting bracket is optional. The accessories can be purchased at your local retail store.
- The length of the screw may differ for each wall mounting bracket. Ensure the correct length screw is used.
- For more information, please refer to the user manual for the wall mounting bracket.

## REMOTE CONTROL

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully to use the monitor correctly.


To install batteries, open the battery cover, place batteries (1.5 V AAA) matching  $\oplus$  and  $\bigcirc$  terminals to the labels inside the compartment, and close the battery cover.


To remove the batteries, perform the installation actions in reverse. The illustrations may differ from the actual accessories.



### CAUTION

- Do not mix old and new batteries, as this may damage the remote control.
- Be sure to point the remote control toward the remote control sensor on the monitor.
- The GAME MODE and PICTURE MODE are disabled when PBP/PIP on

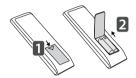

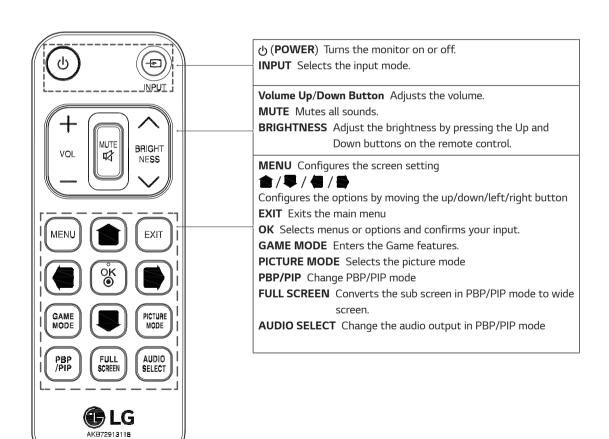

## **USING THE MONITOR**


## Connecting to a PC

 This monitor supports the \*Plug and Play feature.
 \*Plug and Play: A feature that allows you to add a device to your computer without having to reconfigure anything or install any manual drivers.

### **HDMI** connection

Transmits the digital video and audio signals from your PC and A/V devices to the monitor. Connect your PC and AV device to the monitor with the HDMI cable as illustrated below.

Press the menu button and then select the input option from the input menu.

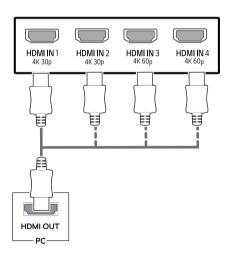


## 0

#### **NOTE**

- If you use HDMI PC, it can cause compatibility problem.
- Use a certified cable with the HDMI logo attached.
   If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
  - High-Speed HDMI®/™ Cable
  - High-Speed  $\mathrm{HDMI}^{\circ}/^{\mathsf{TM}}$  Cable with Ethernet
  - HDMI 1/2 only support 4K@30Hz
  - HDMI 3/4 can support 4K@60Hz

### DisplayPort connection

Transmits the digital video and audio signals from your PC to the monitor. Connect your PC to the monitor using the DisplayPort cable as illustrated below. Press the menu button and then select the input option from the input menu.

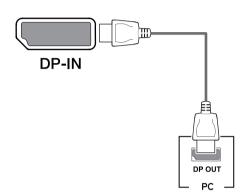



### NOTE


- There may be no video or audio output depending on the DP version of the PC.
- If you use generic cables not certified by LG, the screen may not display or there may be image noises.

### **USB-C** connection

Transmits digital video and audio signals from your PC to the monitor.

Connect the monitor to your PC using the USB C-C cable as shown in the illustration below.

Press the menu button and then select the input option from the input menu.

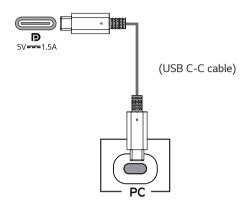




### **NOTE**

- PD(Power Delivery) and DP Alternate Mode(DP over USB-C) are supported via USB-C Port.
- Features may not work properly depending on the connected device's specifications and the environment.
- USB-C port is not for the Monitor Power source but for a PC power source.

Connect Adapter to supply power to the Monitor

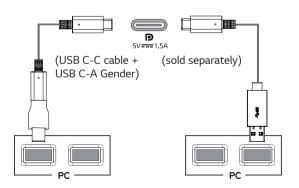


## **Connecting to AV Devices**

### **HDMI** connection

Transmits the digital video and audio signals from your PC and A/V devices to the monitor. Connect your PC and AV device to the monitor with the HDMI cable as illustrated below

Press the menu button and then select the input option from the input menu.

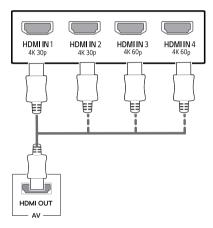



#### NOTE

- Use a certified cable with the HDMI logo attached.
   If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
  - High-Speed HDMI®/™ Cable
  - High-Speed HDMI®/™ Cable with Ethernet
  - HDMI 1/2 only support 4K@30Hz
  - HDMI 3/4 can support 4K@60Hz

## **Connecting Peripherals**


### **USB Cable connection - PC**

The USB port on the product functions as a USB hub. Please connect the USB C-C cable to the PC.



#### NOTE

- Make sure to install the most recent Windows OS service pack before using the product.
- Peripheral devices are sold separately.
- A keyboard, mouse, or USB device can be connected to the USB port.
- Quick Charge is available through the USB1 port
- The charging speed may vary depending on the device.

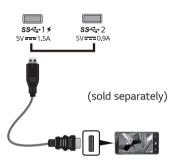




### **CAUTION**

Cautions When Using a USB Device

- A USB device with an automatic recognition program installed, or that uses its own driver, may not be recognized.
- Some USB devices may not be supported or may not work properly.
- It is recommended to use a USB hub or hard disk drive with power supplied. (If the power supply is not adequate, the USB device may not be recognized properly.)
- If the USB C-C cable is not connected with Host PC, monitor may not support 'Charge'.

- The items supplied with your product may vary depending on the model.
- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.
- For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width.
- Use an extension cable that supports USB2.0 or 3.0 if the USB cable or USB memory stick does not fit into Your Monitor USB port.

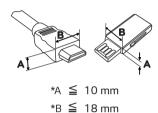


- Use a certified cable with the HDMI logo attached.
   If you do not use a certified HDMI cable, the screen may not display or a connection error may
- Recommended HDMI cable types
- High-Speed HDMI®/™ cable
- High-Speed HDMI®/™ cable with Ethernet

## **Connecting to External Devices**

## **Connecting Headphones**

Connect peripherals to the monitor via the headphones port. Connect as illustrated.

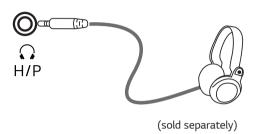



### **NOTE**

- Peripheral devices are sold separately.
- If you use angled earphones, it may cause a problem with connecting another external device to the monitor. Therefore, it is recommended to use straight earphones.



 Depending on the audio settings of the PC and external device, headphones and speaker functions may be limited.

## **USER SETTINGS**

## **Activating the Main Menu**

- 1 Press the joystick button on the bottom of the monitor.
- 2 Move the joystick up/down (▲/▼) and left/right(◄/►) to set the options.
- 3 Press the joystick button once more to exit the main menu.



| Button   | Menu Status       |                    | Description  |
|----------|-------------------|--------------------|--|
| Ma       |                   | menu disabled      | Enables the main menu.   |
|          | Main menu enabled |                    | Exits the main menu. (Holding down the button to turn off the monitor. You can turn off the monitor this way at any time, including when the OSD is on.) |
|          | 4                 | Main menu disabled | Adjusts the monitor volume level.  |
|          |                   | Main menu enabled  | Enters the <b>Input</b> feature.   |
|          | •                 | Main menu disabled | Adjusts the monitor volume level.  |
|          |                   | Main menu enabled  | Enters the <b>Menu</b> features.   |
| <b>A</b> | <b>A</b>          | Main menu disabled | Displays information on the current input.   |
|          |                   | Main menu enabled  | Turns off the monitor.   |
|          |                   | Main menu disabled | Displays information on the current input.   |
|          | •                 | Main menu enabled  | Enters the <b>Game</b> features.   |

### Main Menu Features



| Main Menu | Description                                   |
|-----------|---|
| Menu      | Configures the screen settings.               |
| Game Mode | You can change Picture Mode to a gaming mode. |
| Input     | Sets input mode.                              |
| Power Off | Turns off the monitor.                        |
| Exit      | Exits the main menu.                          |

## **User Settings**

### Menu Settings

- To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the Menu.
- 2 Configure the options by moving the joystick up/down/left/right.
- 3 To return to the upper menu or set other menu items, move the joystick to ◀ or pressing (⑥ / Ok) it.
- 4 If you want to exit the OSD menu, move the joystick to ◀ until you exit.
- When you enter the menu, instructions on how to use the button will appear in the bottom right corner of the screen.









**Quick Settings** 

Input

Picture

General



## CAUTION

• Your monitor's OSD (On Screen Display) may differ slightly from that shown in this manual.

Each option is described below.

| Menu > Quick Settings | Description  |  |  |  |
|-----------------------|--|--|--|--|
| Brightness            | A diverse sheet and a single second s |  |  |  |
| Contrast              | Adjusts the color contrast and brightness of the screen.   |  |  |  |
| Volume                | Adjusts the volume level.  |  |  |  |
|                       | NOTE   |  |  |  |
|                       | <ul> <li>You can adjust Mute / Unmute by moving the joystick button to ▼in the Volume menu.</li> </ul>   |  |  |  |

### [PBP/PIP OFF]

| Menu > Input | Description  |  |  |
|--------------|--|--|--|
| Input List   | Selects the inp  | ut mode.   |  |
| Aspect Ratio | Adjusts the aspect ratio of the screen.  |  |  |
|              | Full Wide  | Displays the video in wide-screen, regardless of the video signal input. |  |
|              | Original   | Displays video according to the aspect ratio of the video signal input.  |  |
|              | 1:1 The aspect ratio is not adjusted from the original.  |  |  |
|              | NOTE  • The display may look the same for Full Wide , Original, and 1:1 options at the recommended resolution (3840 x 2160). |  |  |
| Underscan    | Reduce the display area  |  |  |
| PBP/PIP      | You can select the various PBP or PIP combination.   |  |  |

### [PBP/PIP ON]

| Menu > Input | Description  |   |   |  |
|--------------|--|---|---|--|
| Input List   | Displays the s   | Displays the screens of main input and sub input  |   |  |
| Aspect Ratio | Adjusts the aspect ratio of the screen.  |   |   |  |
|              | Main input   | Full Wide   | Displays the video to fit the PBP/PIP screen, regardless of the video signal input.     |  |
|              | Original Displays the video in the aspect ratio of the video signal input on the screen. |   | Displays the video in the aspect ratio of the video signal input on the PBP/PIP screen. |  |
|              | Sub input  | Full Wide   | Displays the video to fit the PBP/PIP screen, regardless of the video signal input.     |  |
|              |  | Original  | Displays the video in the aspect ratio of the video signal input on the PBP/PIP screen. |  |
| Underscan    | Reduce the display area  |   |   |  |
| PBP/PIP      | You can selec  | You can select the various PBP or PIP combination |   |  |
| PIP Size     | Sets the size of the PIP Sub window. ( Small/Medium/Large )                              |   |   |  |
| Transparency | Sets the opacity of PIP  |   |   |  |
| Sound Out    | Select the audio output in PBP/PIP mode  |   |   |  |



• If not using the PBP/PIP feature, PIP Size, Transparency and Sound Out are deactivated.

### Each option is described below.

| Menu > Picture  | Description   |   |  |
|---|---|---|--|
| Picture Mode  | Custom  | Allows the user to adjust each element. The color mode of the main menu can be adjusted.  |  |
|   | Reader  | Optimizes the screen for viewing documents. You can brighten the screen in the OSD menu.  |  |
|   | Photo   | Optimizes the screen for photos.  |  |
|   | Cinema  | Optimizes the screen for video.   |  |
|   | Dark Room 1   | This mode adjusts the brightness to the optimal level for working in a dark environment.  |  |
|   | Dark Room 2         This mode sets the brightness to a lower level than Dark Room 1.                |   |  |
|   | Color Weakness  | This mode is for users who cannot distinguish between red and green. It enables users with color weakness to easily distinguish between the two colors. |  |
|   | FPS Game 1  | This mode is optimized for FPS games.   |  |
|   | FPS Game 2 It has a higher Black Stabilizer value than FPS Game 1. It is suitable for very dark FPS |   |  |
|   | RTS Game  | This mode is optimized for RTS Game.  |  |
| Custom (Game) In this mode, users can customize various elements in |   | In this mode, users can customize various elements including game-related options.  |  |



• If the picture mode is changed, the screen may flicker or the resolution of your PC screen may be affected.

| Picture Adjust | Brightness           | Adjusts the  | brightn  | ess of the scre        | en.                  |                                    |  |
|----------------|----------------------|--|--|------------------------|----------------------|------------------------------------|--|
|                | Contrast             | Adjusts the  | contras  | st of the screen       |                      |                                    |  |
|                | Sharpness            | Adjusts the  | sharpne  | ess of the scree       | n.                   |                                    |  |
|                | SUPER<br>RESOLUTION+ | High Optimized picture quality is displayed when a user wants crystal clear images. It is effective for high quality video or game.                                  |  |                        |                      |                                    |  |
|                |                      | Middle  The optimized picture quality is displayed when a user wants images between low and high modes for comfortable viewing. It is effective for UCC or SD video. |  |                        |                      |                                    |  |
|                |                      | Low The optimized picture quality is displayed when a user wants smooth and natural images. It is effective for slow-moving pictures or still images.                |  |                        |                      |                                    |  |
|                |                      | Off  | Select<br>this m   |                        | everyday viewing.    | SUPER RESOLUTION+ is turned off in |  |
|                |                      | O No   | OTE  |                        |                      |                                    |  |
|                |                      | Because  | this is  | a function to i        | ncrease the sharpne  | ess of low resolution pictures,    |  |
|                |                      | it is not  | recomi   | mended to use          | the function for no  | rmal text or for desktop icons.    |  |
|                |                      | Doing so   | o may r  | esult in unnece        | ssarily high sharpne | ess.                               |  |
|                | Black Level          | Sets the offset level (for HDMI only).  Offset: as a reference for a video signal, this is the darkest color the monitor can display.                                |  |                        |                      |                                    |  |
|                |                      | High Keeps the current contrast ratio of the screen.   |  |                        |                      |                                    |  |
|                |                      | Lowers the black levels and raises the white levels from the current contrast ratio of the screen.   |  |                        |                      |                                    |  |
|                | HDMI ULTRA HD        | Provides sharper images when connected to a device supporting ULTRA HD Deep Color.   |  |                        |                      |                                    |  |
|                | Deep Color           | 4K@60 Hz Support Format <sup>1)</sup>  |  |                        |                      |                                    |  |
|                |                      | Resolution   |  | Frame rate             | Color                | Depth / Chroma Sampling            |  |
|                |                      | Resoluti   | OII  | (Hz)                   | 8 bit                | 10 bit                             |  |
|                |                      |  |  | F0.04                  |                      | YCbCr 4:2:0                        |  |
|                |                      | 3840 x 2160  |  | 0 59.94 60.00          | YCbCr 4:4:4          | -                                  |  |
|                |                      |  |  |                        | RGB 4:4:4            | -                                  |  |
|                |                      | 1) Supported when HDMI ULTRA HD Deep Color is set to On.   |  |                        |                      |                                    |  |
|                |                      | NOTE   |  |                        |                      |                                    |  |
|                |                      | If the connected device does not support ULTRA HD Deep Color, the feature  |  |                        |                      |                                    |  |
|                |                      | may not work properly.   |  |                        |                      |                                    |  |
|                |                      | If a problem occurs, set the HDMI ULTRA HD Deep Color option to Off.   |  |                        |                      |                                    |  |
|                | DFC                  | On   | On Adjusts the brightness automatically according to the screen. |                        |                      |                                    |  |
|                |                      | Off  |  | les the <b>DFC</b> fea |                      |                                    |  |

| Game Adjust   | Response Time    | Sets a response time for displayed pictures based on the speed of the screen.  For a normal environment, it is recommended that you use <b>Normal</b> . For a fast-moving picture, it is recommended that you use <b>Fast</b> .  Setting to <b>Fast</b> may cause image sticking.  |   |  |  |
|---------------|------------------|--|---|--|--|
|               |                  | Fast   | Sets the response time to Fast.   |  |  |
|               |                  | Normal   | Sets the response time to Normal.   |  |  |
|               |                  | Slow   | Sets the response time to Slow.   |  |  |
|               |                  | Off  | Does not use the response time improvement feature.   |  |  |
|               | Black Stabilizer | You can control the black contrast to have better visibility in dark scenes. Increasing the <b>Black Stabilizer</b> value brightens the low gray level area on the screen. (You can easily distinguish objects on dark game screens.) Reducing the <b>Black Stabilizer</b> value darkens the low gray level area and increases the dynamic contrast on the screen. |   |  |  |
| Color Adjust  | Gamma            | Mode 1, Mode 2,<br>Mode 3  | The higher the gamma value, the darker the image becomes. Likewise, the lower the gamma value, the lighter the image becomes.   |  |  |
|               |                  | Mode 4   | If you do not need to adjust the gamma settings, select Mode 4.   |  |  |
|               | Color Temp       | Custom   | The user can adjust it to red, green, or blue by customization.   |  |  |
|               |                  | Warm   | Sets the screen color to a reddish tone.  |  |  |
|               |                  | Medium   | Sets the screen color between a red and blue tone.  |  |  |
|               |                  | Cool   | Sets the screen color to a bluish tone.   |  |  |
|               | Red              | You can customize  | the picture color using <b>Red, Green</b> , and <b>Blue</b> colors.   |  |  |
|               | Green            |  |   |  |  |
|               | Blue             |  |   |  |  |
|               | Six Color        | colors(Red_Hue, Re   | uirements for colors through adjusting the color and saturation of the six d_Saturation, Green_Hue, Green_Saturation, Blue_Hue, Blue_Saturation, turation, Magenta_Hue, Magenta_Saturation, Yellow_Hue, Yellow_Satuhe settings. |  |  |
|               |                  | Hue  | Adjusts the tone of the screen colors.  |  |  |
|               |                  | Saturation   | Adjusts the saturation of the screen colors. The lower the value, the less saturated and brighter the colors become. The higher the value, the more saturated and darker the colors become.                                     |  |  |
| Picture Reset | Do you want to r | eset your settings?  |   |  |  |
|               | Yes              | Returns to the default settings.   |   |  |  |
|               | No               | Cancel the select.   |   |  |  |

| Menu > General    | Description   |  |  |  |
|-------------------|---|--|--|--|
| Language          | Sets the menu screen to the desired language.   |  |  |  |
| Sound Optimizer   | Allows optimized  | sound for individual Monitor installation.   |  |  |
|                   | Stand Type  | Optimized sound for a stand-mounted Monitor.   |  |  |
|                   | Wall Mount<br>Type  | Optimized sound for a wall-mounted Monitor.  |  |  |
| SMART ENERGY      | High  | Saves energy using the high-efficiency SMART ENERGY SAVING feature.  |  |  |
| SAVING            | Low   | Saves energy using the low-efficiency SMART ENERGY SAVING feature.   |  |  |
|                   | Off   | Disables the SMART ENERGY SAVING feature.  |  |  |
| Set ID            | You can choose t  | he Set ID 01~Set ID 10   |  |  |
| Power LED         | Turns the power I   | .ED on the bottom of the monitor on or off.  |  |  |
|                   | On  | The power LED turns on automatically.  |  |  |
|                   | Off   | The power LED turns off.   |  |  |
| Automatic Standby |   | matically turns off the monitor when there is no movement on the screen for a period set a timer for the auto-off function. (Off, 4 H, 6 H, and 8 H)   |  |  |
|                   | <ul> <li>NOTE</li> <li>Be sure to configure this option according to the DisplayPort version supported by your graphics card. Set this option to Disable if your graphics card does not support DisplayPort 1.2.</li> </ul> |  |  |  |
| Buzzer            | This feature lets you set the sound generated from <b>Buzzer</b> when your monitor powers on.   |  |  |  |
|                   | On  | Enables your monitor's <b>Buzzer</b> .   |  |  |
|                   | Off   | Disables your monitor's <b>Buzzer</b> .  |  |  |
| Quick Charge      | Quick Charge is a feature that rapidly charges the device connected to the USB 1 port.  |  |  |  |
|                   | On  | Enables Quick Charge.  |  |  |
|                   |   | Litables Quick Charge.   |  |  |
|                   | Off   | Disables Quick Charge.   |  |  |
| OSD Lock          |   | -  |  |  |
| OSD Lock          |   | Disables Quick Charge.   |  |  |
| OSD Lock          | This feature disab  | Disables <b>Quick Charge</b> .  bles the configuration and adjustment of menus.  |  |  |
| OSD Lock          | This feature disable on Off NOTE  | Disables Quick Charge.  Disables Quick Charge.  Disables OSD Lock.  Disables OSD Lock.  Disables OSD Lock.  Disables OSD Lock.  Disables OSD Lock in General and   |  |  |
| OSD Lock          | This feature disable on off NOTE  All features a the Exit butt  | Disables Quick Charge.  Disables Quick Charge.  Disables OSD Lock.  Disables OSD Lock.  Disables OSD Lock.  Disables OSD Lock.  Disables OSD Lock in General and   |  |  |
|                   | This feature disable On Off NOTE All features a the Exit butt User can select O   | Disables Quick Charge.  Disables Quick Charge.  Disables OSD Lock.               |  |  |
| OSD Size          | This feature disable On Off NOTE All features a the Exit butt User can select O   | Disables Quick Charge.  Disables Quick Charge.  Disables OSD Lock.  Disables OSD Lock.  Disables OSD Lock.  are disabled except Brightness, Contrast, Volume, Input, OSD Lock in General and on.  SD Size to Large or Small. |  |  |



• Saving Data depends on the Panel. So, these values may be different from each panel and/or panel vendor. If the SMART ENERGY SAVING option is High or Low, monitor luminance become higher or lower depending on the source.

## **TROUBLESHOOTING**

| Nothing is displayed on the screen.                 |  |  |  |
|---|--|--|--|
| Is the monitor's power cord plugged in?             | Check if the power cord is correctly plugged into the power outlet.  |  |  |
| Is the power LED on?                                | Check the power cable connection and press the power button.   |  |  |
| Is the power on and the power LED displaying white? | Check that the connected input is enabled (Menu > Input > Input list).   |  |  |
| Is the OUT OF RANGE message being displayed?        | <ul> <li>This occurs when signals transferred from the PC (graphics card) are out of the horizontal or vertical frequency range of the monitor. Please see the Product Specification section of this manual to set the appropriate frequency.</li> </ul> |  |  |
| Is the No Signal message being displayed?           | <ul> <li>This is displayed when the signal cable between the PC and the monitor is<br/>missing or disconnected. Check the cable and reconnect it.</li> </ul>   |  |  |

| The OSD lock message is being displayed.                         |   |  |  |
|--|---|--|--|
| Are some functions not available when you press the Menu button? | • | The OSD is locked. Go to Menu > General and set OSD Lock to Off. |  |

| The screen retains an image.                                   |   |  |  |
|--|---|--|--|
| Does image sticking occur even when the monitor is turned off? | <ul> <li>Displaying a still image for a prolonged time may cause damage to the screen, resulting in the retention of the image.</li> <li>To extend the lifetime of the monitor, use a screensaver.</li> </ul> |  |  |

| Screen display is unstable and shaky / Images displayed on the monitor leave shadow trails. |   |  |  |
|---|---|--|--|
| Did you select the appropriate resolution?  | <ul> <li>If the selected resolution is HDMI 1080i 60/50 Hz (interlaced), the screen<br/>may be flickering. Change the resolution to 1080P or the recommended<br/>resolution.</li> </ul> |  |  |



### NOTE

- **Vertical frequency** In order to display an image, the screen must be refreshed dozens of times per second, like a fluorescent lamp. The number of times the screen is refreshed per second is called vertical frequency, or refresh rate, and is represented by Hz.
- **Horizontal frequency** The time it takes to display one horizontal line is called the horizontal cycle. If 1 is divided by the horizontal interval, the result is the number of horizontal lines displayed per second. This is called horizontal frequency and is represented by kHz.
- LED can be lighted with Set OSD Menu.
   Menu General Power LED On



### NOTE

- Check if the graphics card's resolution or frequency is within the range allowed by the monitor and set it to the recommended (optimal) resolution in **Control Panel > Display > settings**.
- Not setting the graphics card to the recommended (optimal) resolution may result in blurred text, a dimmed screen, a truncated display area, or misalignment of the display.
- The setting methods may be different depending on the computer or operating system, and some resolutions may not be available depending on the performance of the graphics card. If this is the case, contact the manufacturer of the computer or graphics card for assistance.
- Some graphics cards may not support 3840 x 2160 resolution. If the resolution cannot be displayed, contact the manufacturer of your graphics card.

| The display color is abnormal.                        |   |  |  |
|---|---|--|--|
| Does the display appear discolored (16 colors)?       | <ul> <li>Set the color to 24 bit (true color) or higher. In Windows, go to Control<br/>Panel &gt; Display &gt; Settings &gt; Color Quality.</li> </ul>  |  |  |
| Does the display color appear unstable or monochrome? | <ul> <li>Check if the signal cable is connected properly. Reconnect the cable or<br/>reinsert the PC's graphics card.</li> </ul>  |  |  |
| Are there spots on the screen?                        | <ul> <li>When using the monitor, pixilated spots (red, green, blue, white, or black) may appear on the screen. This is normal for an LCD screen. It is not an error, nor is it related to the monitor's performance.</li> </ul> |  |  |

| Do you see an "Unrecognized monitor, Plug&Play (VESA DDC) monitor found" message? |  |   |  |
|---|--|---|--|
| Have you installed the display driver?  | Be sure to install the display driver from the display driver CD (or diskette) |   |  |
|   | that comes with your display. Or, you can also download the driver from        |   |  |
|   | our web site: http://www.lg.com.   |   |  |
|   | •  | Make sure to check if the video card supports Plug&Play function. |  |

| No sound from the headphone port or speaker. |   |  |  |
|--|---|--|--|
| Are images displayed using DisplayPort       | Try increasing the volume using the button on the monitor.                |  |  |
| or HDMI input without sound?                 | Set the audio output of the PC to the monitor you are using. On Microsoft |  |  |
|  | Windows, go to Control Panel > Hardware and Sound > Sound > set the       |  |  |
|  | monitor as default device.  |  |  |

## **SPECIFICATIONS**

## 43UD79

|                    | I  |   |  |  |  |
|--------------------|--|---|--|--|--|
| LCD Screen         | Туре   | TFT (Thin Film Transistor)                                    |  |  |  |
|                    |  | LCD (Liquid Crystal Display) Screen                           |  |  |  |
|                    | Pixel Pitch  | 0.2451 mm x 0.2451 mm   |  |  |  |
| Resolution         | Maximum Resolution   | HDMI IN 1/2 : 3840 x 2160 @ 30 Hz                             |  |  |  |
|                    |  | HDMI IN 3/4 : 3840 x 2160 @ 60 Hz                             |  |  |  |
|                    |  | DP IN (USB-C IN): 3840 x 2160 @ 60 Hz                         |  |  |  |
|                    | Recommended Resolution   | HDMI IN 1/2 : 3840 x 2160 @ 30 Hz                             |  |  |  |
|                    |  | HDMI IN 3/4 : 3840 x 2160 @ 60 Hz                             |  |  |  |
|                    |  | DP IN (USB-C IN): 3840 x 2160 @ 60 Hz                         |  |  |  |
| Video Signal       | Horizontal Frequency   | 30 kHz to 135 kHz   |  |  |  |
|                    | Vertical Frequency   | 56 Hz to 61 Hz  |  |  |  |
| Input Connector    | HDMI1,2,3,4, DP(DisplayPort) IN, H/P, USB-C, USB ( <b>SS</b> ←) 1/2, RS-232C |   |  |  |  |
| Power input        | 100-240 V~ 50 / 60 Hz, 1.5 A   |   |  |  |  |
| Power              | On mode: 70 W Typ. (Outgoing condition)*                                     |   |  |  |  |
| consumption (Typ.) | yp.) Sleep Mode ≤ 0.5 W  |   |  |  |  |
|                    | Off Mode ≤ 0.3 W   |   |  |  |  |
| Environmental      | Operating Condition  | Temperature: 0°C to 40°C (32 °F to 104 °F); Humidity: < 80%   |  |  |  |
| Conditions         | Storing Condition  | Temperature: -20°C to 60°C (-4 °F to 140 °F); Humidity: < 85% |  |  |  |
| Dimension          | Monitor Size (Width x Height x Depth)  |   |  |  |  |
|                    | With Stand   | 38.0 inches x 25.4 inches x 10.8 inches                       |  |  |  |
|                    | Without Stand  | 38.0 inches x 22.6 inches x 2.7 inches                        |  |  |  |
| Weight (Without    | With Stand   | 34.9 lbs  |  |  |  |
| Packaging)         | Without Stand  | 27.0 lbs  |  |  |  |

The specifications are subject to change without notice.

<sup>\*</sup> The power consumption level can be different by operating condition and monitor setting.
\* The On mode power consumption is measured with LGE test standard (Full White pattern , Maximum resolution).

## 43UD79T

|                    | 1_  |   |  |  |  |  |
|--------------------|---|---|--|--|--|--|
| LCD Screen         | Туре  | TFT (Thin Film Transistor)                                    |  |  |  |  |
|                    |   | LCD (Liquid Crystal Display) Screen                           |  |  |  |  |
|                    | Pixel Pitch   | 0.2451 mm x 0.2451 mm   |  |  |  |  |
| Resolution         | Maximum Resolution  | HDMI IN 1/2: 3840 x 2160 @ 30 Hz                              |  |  |  |  |
|                    |   | HDMI IN 3/4 : 3840 x 2160 @ 60 Hz                             |  |  |  |  |
|                    |   | DP IN (USB-C IN): 3840 x 2160 @ 60 Hz                         |  |  |  |  |
|                    | Recommended Resolution  | HDMI IN 1/2 : 3840 x 2160 @ 30 Hz                             |  |  |  |  |
|                    |   | HDMI IN 3/4 : 3840 x 2160 @ 60 Hz                             |  |  |  |  |
|                    |   | DP IN (USB-C IN): 3840 x 2160 @ 60 Hz                         |  |  |  |  |
| Video Signal       | Horizontal Frequency  | 30 kHz to 135 kHz   |  |  |  |  |
|                    | Vertical Frequency  | 56 Hz to 61 Hz  |  |  |  |  |
| Input Connector    | HDMI1,2,3,4, DP(DisplayPort) IN, H/P, USB-C, USB (\$\$€) 1/2, RS-232C |   |  |  |  |  |
| Power input        | 100-240 V~ 50 / 60 Hz, 1.5 A  |   |  |  |  |  |
| Power              | On mode: 70 W Typ. (Outgoing condition)*                              |   |  |  |  |  |
| consumption (Typ.) | Sleep Mode ≤ 0.5 W  |   |  |  |  |  |
|                    | Off Mode ≤ 0.3 W  |   |  |  |  |  |
| Environmental      | Operating Condition   | Temperature: 0°C to 40°C (32 °F to 104 °F); Humidity: < 80%   |  |  |  |  |
| Conditions         | Storing Condition   | Temperature: -20°C to 60°C (-4 °F to 140 °F); Humidity: < 85% |  |  |  |  |
| Dimension          | Monitor Size (Width x Height x Depth)                                 |   |  |  |  |  |
|                    | With Stand  | 38.0 inches x 24.5 inches x 9.1 inches                        |  |  |  |  |
|                    | Without Stand   | 38.0 inches x 22.6 inches x 2.7 inches                        |  |  |  |  |
| Weight (Without    | With Stand  | 28.6 lbs  |  |  |  |  |
| Packaging)         | Without Stand   | 28.1 lbs  |  |  |  |  |
|                    |   |   |  |  |  |  |

The specifications are subject to change without notice.

<sup>\*</sup> The power consumption level can be different by operating condition and monitor setting.
\* The On mode power consumption is measured with LGE test standard (Full White pattern, Maximum resolution).

# Factory Support Mode (Preset Mode, PC)

## **HDMI**

| Display Modes (Resolution) | Horizontal<br>Frequency(kHz) | Vertical<br>Frequency(Hz) | Polarity(H/V) | Remarks  |
|----------------------------|------------------------------|---------------------------|---------------|--|
| 640 x 480                  | 31.469                       | 59.94                     | -/-           |  |
| 800 x 600                  | 37.879                       | 60.317                    | +/+           |  |
| 1024 x 768                 | 48.363                       | 60                        | -/-           |  |
| 1152 x 864                 | 54.347                       | 60.05                     | +/+           |  |
| 1280 x 720                 | 45                           | 60                        | +/+           |  |
| 1280 x 1024                | 63.981                       | 60.02                     | +/+           |  |
| 1600 x 900                 | 60                           | 60                        | +/+           |  |
| 1920 x 1080                | 67.5                         | 60                        | +/-           |  |
| 2560 x 1440                | 88.79                        | 59.95                     | +/-           |  |
| 3840 x 2160                | 67.5                         | 30                        | +/-           |  |
| 3840 x 2160                | 135                          | 60                        | +/-           | When HDMI ULTRA HD Deep<br>Color is set to ON. |

# DisplayPort / USB-C

| Display Modes (Resolution) | Horizontal<br>Frequency(kHz) | Vertical<br>Frequency(Hz) | Polarity(H/V) | Remarks |
|----------------------------|------------------------------|---------------------------|---------------|---------|
| 640 x 480                  | 31.469                       | 59.94                     | -/-           |         |
| 800 x 600                  | 37.879                       | 60.317                    | +/+           |         |
| 1024 x 768                 | 48.363                       | 60                        | -/-           |         |
| 1152 x 864                 | 54.347                       | 60.05                     | +/+           |         |
| 1280 x 720                 | 45                           | 60                        | +/+           |         |
| 1280 x 1024                | 63.981                       | 60.02                     | +/+           |         |
| 1600 x 900                 | 60                           | 60                        | +/+           |         |
| 1920 x 1080                | 67.5                         | 60                        | +/-           |         |
| 2560 x 1440                | 88.79                        | 59.95                     | +/-           |         |
| 3840 x 2160                | 66.66                        | 30                        | +/-           |         |
| 3840 x 2160                | 133.32                       | 60                        | +/-           |         |

# **HDMI Timing (Video)**

| Factory support mode<br>(Preset Mode) | Horizontal<br>Frequency(kHz) | Vertical<br>Frequency(Hz) | Remarks                                     |
|---------------------------------------|------------------------------|---------------------------|---|
| 480p                                  | 31.5                         | 60                        |   |
| 720p                                  | 45.0                         | 60                        |   |
| 1080p                                 | 67.5                         | 60                        |   |
| 2160p                                 | 135                          | 60                        | When HDMI ULTRA HD Deep Color is set to ON. |

## **Power LED**

| Mode       | LED Color                 |
|------------|---------------------------|
| On Mode    | White (For a few seconds) |
| Sleep Mode | Off                       |
| Off Mode   | Off                       |

## **EXTERNAL CONTROL DEVICE SETUP**

### **Communication Parameters**

Baud rate: 9600 bps (UART)

Data length: 8 bits Parity: None Stop bit: 1 bit

Communication code : ASCII code Use a crossed (reverse) cable.

### **Transmission**

[Command1][Command2][ ][Set ID][ ][Data][Cr]

- \* [Command 1]: First command to control the Monitor.
- \* [Command 2]: Second command to control the Monitor.
- \* [Set ID]: You can adjust the set ID to choose desired monitor ID number in optionmenu.

Adjustment range is 1 ~ 10.

When selecting Set ID '0,' every connected set is controlled.

Set ID is indicated as decimal (1~10) on menu and as Hexa decimal (0x0~0x0A) on

transmission/receiving protocol.

- \* [DATA]: To transmit command data.
- \* [Cr]: Carriage Return

ASCII code '0x0D'

\* [ ] : ASCII code 'space (0x20)'

[Command1][Command2][ ][Set ID][ ][Data][Cr]

## **OK Acknowledgement**

[Command2][ ][Set ID][ ][OK][Data][x]

\* The Monitor transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is in data read mode, it indicates present status data. If the data is in data write mode, it returns the data of the PC computer.

## **Error Acknowledgement**

[Command2][ ][Set ID][ ][NG][Data][x]

\* The Monitor transmits ACK (acknowledgement) based on this format when receiving abnormal data from nonviable functions or communication errors.

## **Command Reference List**

| Title                    | Command 1 | Command 2 | Data(Hex) |
|--------------------------|-----------|-----------|-----------|
| Power                    | k         | a         | 00~01     |
| Screen Mute              | k         | d         | 00~01     |
| Input select (Main)      | х         | b         | 00~FF     |
| Input select (Sub)       | х         | С         | 00~FF     |
| Input select (Sub2)      | х         | d         | 00~FF     |
| Input select (Sub3)      | х         | е         | 00~FF     |
| Aspect Ratio (Main)      | х         | f         | 00~02     |
| Aspect Ratio (Sub)       | х         | g         | 00~01     |
| Aspect Ratio (Sub2)      | х         | h         | 00~01     |
| Aspect Ratio (Sub3)      | х         | i         | 00~01     |
| PBP/PIP                  | k         | n         | 00~09     |
| PIP Size                 | k         | р         | 00~02     |
| Main/Sub Screen Change   | m         | a         | 01        |
| Picture Mode             | d         | х         | 00~14     |
| Brightness               | k         | h         | 00~64     |
| Contrast                 | k         | g         | 00~64     |
| Sharpness                | k         | k         | 00~64     |
| Brightness Stabilization | m         | b         | 00~01     |
| SUPERRESOLUTION+         | m         | С         | 00~03     |
| BlackLevel               | m         | d         | 00~01     |
| HDMIULTRAHD DeepColor    | m         | е         | 00~01     |
| DFC                      | m         | f         | 00~01     |
| Response Time            | m         | g         | 00~03     |
| Black Stablilzer         | m         | h         | 00~64     |
| Uniformity               | m         | i         | 00~01     |
| Gamma                    | m         | j         | 00~09     |
| Color Temp               | k         | u         | 00~04     |
| Red Gain                 | j         | w         | 00~64     |
| Green Gain               | j         | у         | 00~64     |
| Blue Gain                | j         | Z         | 00~64     |
| Language                 | f         | i         | 00~10     |
| SMART ENERGY SAVING      | m         | k         | 00~02     |
| LED Control Button       | m         | l         | 00~03     |
| DVI Power Supply         | m         | m         | 00~01     |
| Auto Screen Off          | m         | n         | 00~01     |
| DisplayPort1.2           | m         | 0         | 00~01     |
| OSDLock                  | k         | m         | 00~01     |
| Reset                    | f         | k         | 00~01     |

| Title                    | ltem  |
|--------------------------|---|
| Power                    | 00: Power Off, 01: Power On   |
| Screen Mute              | 00: Screen Mute Off, 01: Screen Mute On   |
| Input select (Main)      | 90:HDMI1, 91:HDMI2, 92:HDMI3, 93:HDMI4, C0:DP, E0:USB-C   |
| Input select (Sub)       | 90:HDMI1, 91:HDMI2, 92:HDMI3, 93:HDMI4, C0:DP, E0:USB-C   |
| Input select (Sub2)      | 90:HDMI1, 91:HDMI2, 92:HDMI3, 93:HDMI4, C0:DP, E0:USB-C   |
| Input select (Sub3)      | 90:HDMI1, 91:HDMI2, 92:HDMI3, 93:HDMI4, C0:DP, E0:USB-C   |
| Aspect Ratio (Main)      | 00:Full Wide, 01:Original, 02: "1 : 1", 03:Cinema1, 04:Cinema2  |
| Aspect Ratio (Sub)       | 00:Full Wide, 01:Original   |
| Aspect Ratio (Sub2)      | 00:Full Wide, 01:Original   |
| Aspect Ratio (Sub3)      | 00:Full Wide, 01:Original   |
| PBP/PIP                  | 00:OFF, 01:PBP, 02:PBP2, 03:PIP_LT, 04:PIP_RT, 05:PIP_LB, 06:PIP_RB, 07:PBP_3P(NA), 08:PBP_L1P_R2P(NA), 09:PBP_4P   |
| PIP Size                 | 00:Small, 01:Medium, 02:Large   |
| Main/Sub Screen Change   | 01: Main/Sub Screen exchange  |
| Picture Mode             | 00:custom, 01:mono, 02:Reader, 04:Photo, 05:Cinema, 06:sRGB, 07:Color Weakness, 08:Game, 09:FPS Game1, 0A:FPS Game2, 0B:RTS Game, 0C:Custom Game, 0D:EBU, 0E:REC 709, 0F:SMPTE C, 10:DICOM, 11:Calibration1, 12:Calibration2, 13:DarkRoom1, 14:DarkRoom2, |
| Brightness               | 0 ~ 64 (Hex)<br>** Auto Brightness: Backlight Stabilization On  |
| Contrast                 | 0 ~ 64 (Hex)  |
| Sharpness                | 0 ~ 64 (Hex)  |
| Brightness Stabilization | 00: Off, 01: On   |
| SUPERRESOLUTION+         | 00: High, 01:Middle, 02:Low, 03:Off   |
| BlackLevel               | 00:High, 01:Low   |
| HDMIULTRAHD DeepColor    | 00: On, 01: Off   |
| DFC                      | 00: On, 01: Off   |
| Response Time            | 00:Fast, 01:Normal, 02:Slow, 03:Off   |
| Black Stablilzer         | 0 ~ 64 (Hex)  |
| Uniformity               | 00: On, 01: Off   |
| Gamma                    | 00:Mode4, 01:Mode1, 02:Mode2, 03Mode3, 04:Gamma 1.8, 05:Gamma 2.0, 06:Gamma 2.2, 07:Gamma 2.4, 08:Gamma 2.6, 09:DICOM Gamma   |
| Color Temp               | 00:Manual, 01:Custom, 02:WARM, 03:MEDIUM, 04:COOL   |
| Red Gain                 | 0 ~ 64 (Hex)  |
| Green Gain               | 0 ~ 64 (Hex)  |
| Blue Gain                | 0 ~ 64 (Hex)  |
| Language                 | 00:Eng, 01:Ger; 02:Fre, 03:Spa, 04:Ita, 05:Swe, 06:Fin, 07:Por; 08:Bra, 09:Pol, 0A:Rus, 0B:Grc, 0C:Ukr, 0D:Chi, 0E:ChiT, 0F:Jap, 10:Kor   |
| SMART ENERGY SAVING      | 00:High, 01:Low, 02:Off   |
| LED Control Button       | 00:Always On, 01:20sec Time out, 02:10sec Time out, 03:5sec Time out  |
| DVI Power Supply         | 00: On, 01: Off   |
| Auto Screen Off          | 00: On, 01: Off   |
| DisplayPort1.2           | 00:Enable, 01:Disable,  |
| OSDLock                  | 00: Off, 01: On   |
| Reset                    | 00: Picture Reset, 01:Factory Reset   |



• Some commands are not supported according to model.



### **Declaration of Conformity**

Trade Name: LG

Model: 43UD79, 43UD79T

Responsible Party: LG Electronics Inc.

Address: 1000 Sylvan Ave. Englewood Cliffs

NJ 07632 U.S.A TEL: 201-266-2534

\*above information is only for USA FCC Regulatory

This device meets the EMC requirements for home appliances (Class B) and is intended for home usage. This device can be used in all regions. Read the owner's manual (CD) carefully and keep it at hand. Please note that the label attached to the product provides information for technical support.

| MODEL  |  |
|--------|--|
| SERIAL |  |